Model CSD1X2VR **Drop-In Ceiling Speaker** 

With Back Can and Recessed Volume Control 70V & 25V Speaker Systems

#### **Electrical Connection**


- 1 Remove electrical box cover then install cable clamp (if desired) and feed interconnecting cable into the electrical box
- Select speaker leads for desired system type: 70V - Red 25V - Yellow and COM - Black for both. Interconnect the speakers in the system, making sure that all leads of the same color are connected together. Avoid swapping colors.
- 3. Cut hare wire tip off of unused speaker lead. Secure all mechanical connections and re-install electrical box cover
- 4. Set tap selector switch to proper tap setting.
- 5. Speaker volume can be attenuated via front panel recessed volume control

### NOTE: All wiring must comply with NFPA 70


## Ceiling Installation

- 1. For 2 ft, x 4 ft, tile space, cut ceiling tile to 35-1/2" long. For 2 ft, x 2 ft, tile space, cut to 11-1/2" long.
- 2. Place speaker in ceiling opening.
- 3. Slide Tile Support Rail under speaker edge beside opening.

4.	Drop	in	the	tile.

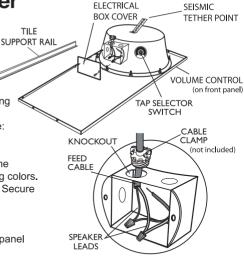

Lead	Color
70V	Red
25V	Yellow
СОМ	Black

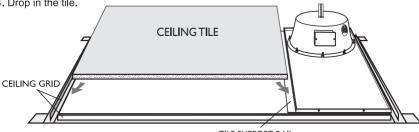

TILE SUPPORT RAIL

# Listed to UL Standard - ANSI/UL 1480

#### - 2-YEAR WARRANTY -

The CSD1X2VR is warranted to be free from defects in material or workmanship for two (2) years from the date of sale to the original purchaser. This warranty does not extend to any of our products that have been subjected to abuse, misuse, improper storage. neglect, accident, improper installation or have been modified or repaired or altered in any manner whatsoever, or where the serial number or date code has been removed or defaced.



XXXXXXX CONFORMS TO **UL STD 60065** CERTIFIED TO CAN/CSA STD C22.2 NO. 60065



XXXXXXX CONFORMS TO **UL STD 1480** 

