#### **RTFM Access**

The RTFM switch access will be on the top side of the horn hidden under a screw that will be used to keep the unit secured. To access the RTFM, complete the following steps:

- 1. Remove the screw to gain access to the RTFM button (see the figure below).
- 2. Use a paper clip to feed through the hole to press the RTFM button (see the figure below).


#### **Announce the IP Address**

To broadcast the device's current IP address, press and hold the RTFM switch for a couple of seconds and then release it

#### **Restore the Factory Default Settings**

To restore the factory defaults, complete the following steps:

- 1. Press and hold the RTFM switch until you hear the device announce the words, "restoring defaults" and "rebooting".
- 2. Release the RTFM switch. The device will be restored to the factory default settings.

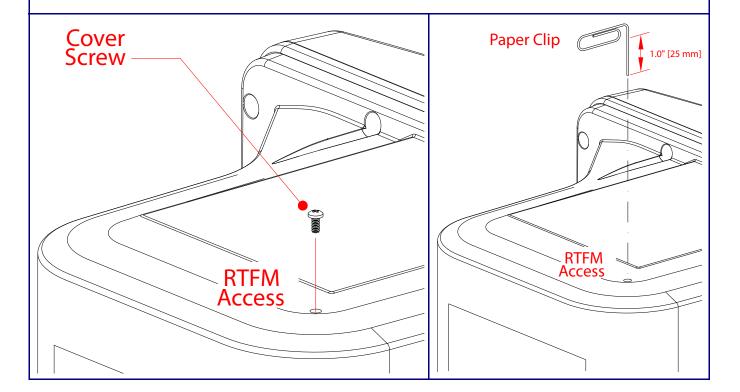

### Contacting CyberData

Corporate Headquarters

CyberData Corporation Sales: (831) 373-2601 ext. 334
3 Justin Court Support: 831-373-2601 ext. 333

Monterey, CA 93940, USA

Support Website: <a href="http://support.cyberdata.net/">http://support.cyberdata.net/</a>
RMA Department: (831) 373-2601 ext. 136

Phone: 831-373-2601 RMA Email: RMA@CyberData.net Fax: 831-373-4193 RMA Status: http://support.cyberdata.net/

http://www.cyberdata.net/ Warranty Information: http://support.cyberdata.net/



# Installation Quick Reference InformaCast Enabled IP66 Outdoor Horn


# 011472



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

#### Typical System Installation

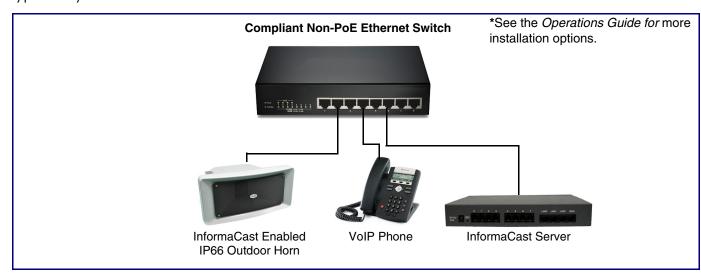


#### Getting Started

- Download the Operations Guide PDF file from the Documents tab at the following webpage: https://www.cyberdata.net/products/011472
- · Create a plan for the locations of your paging amplifiers.
- · WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions
- WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING: The InformaCast Enabled IP66 Outdoor Horn enclosure is not rated for any AC voltages!


#### **Parts**



Quick Reference

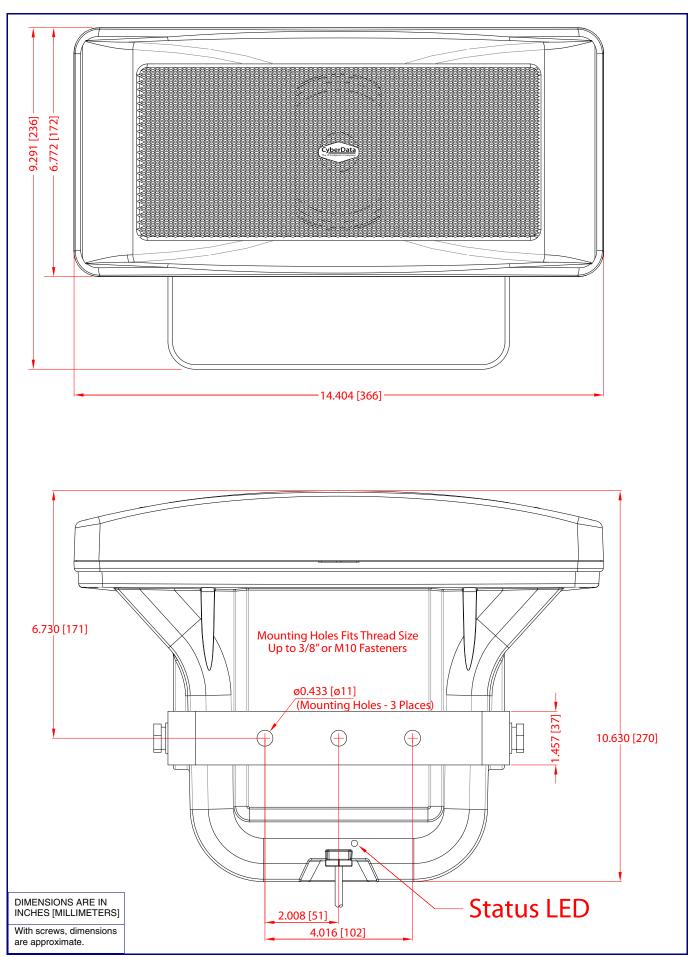

## Connection Options

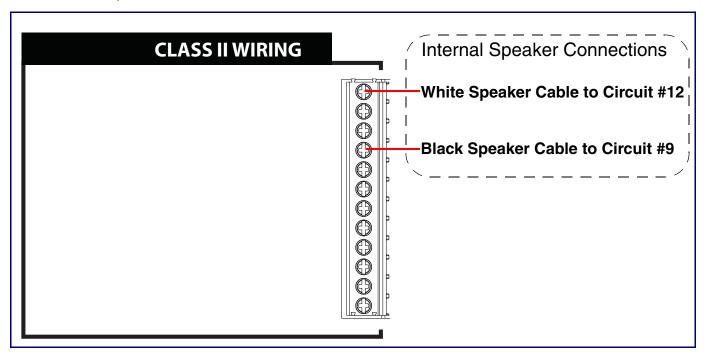

# Install the Network Cable Through Weatherproof Cable Gland

