


RTFM Button

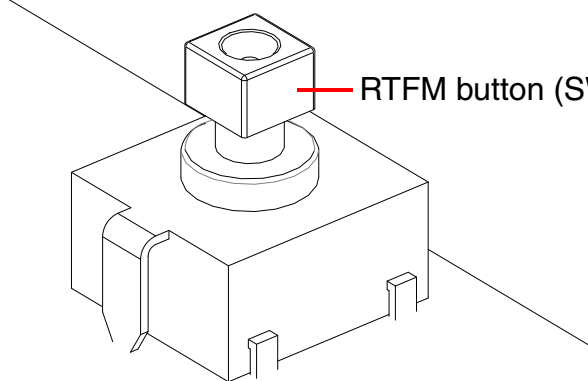


RTFM button (SW1)

When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button (SW1) to restore the device to the factory default settings.

To restore the device to factory default settings:

- Press and hold the RTFM button for seven seconds, and then release the RTFM button.

Side Conduit Mounting

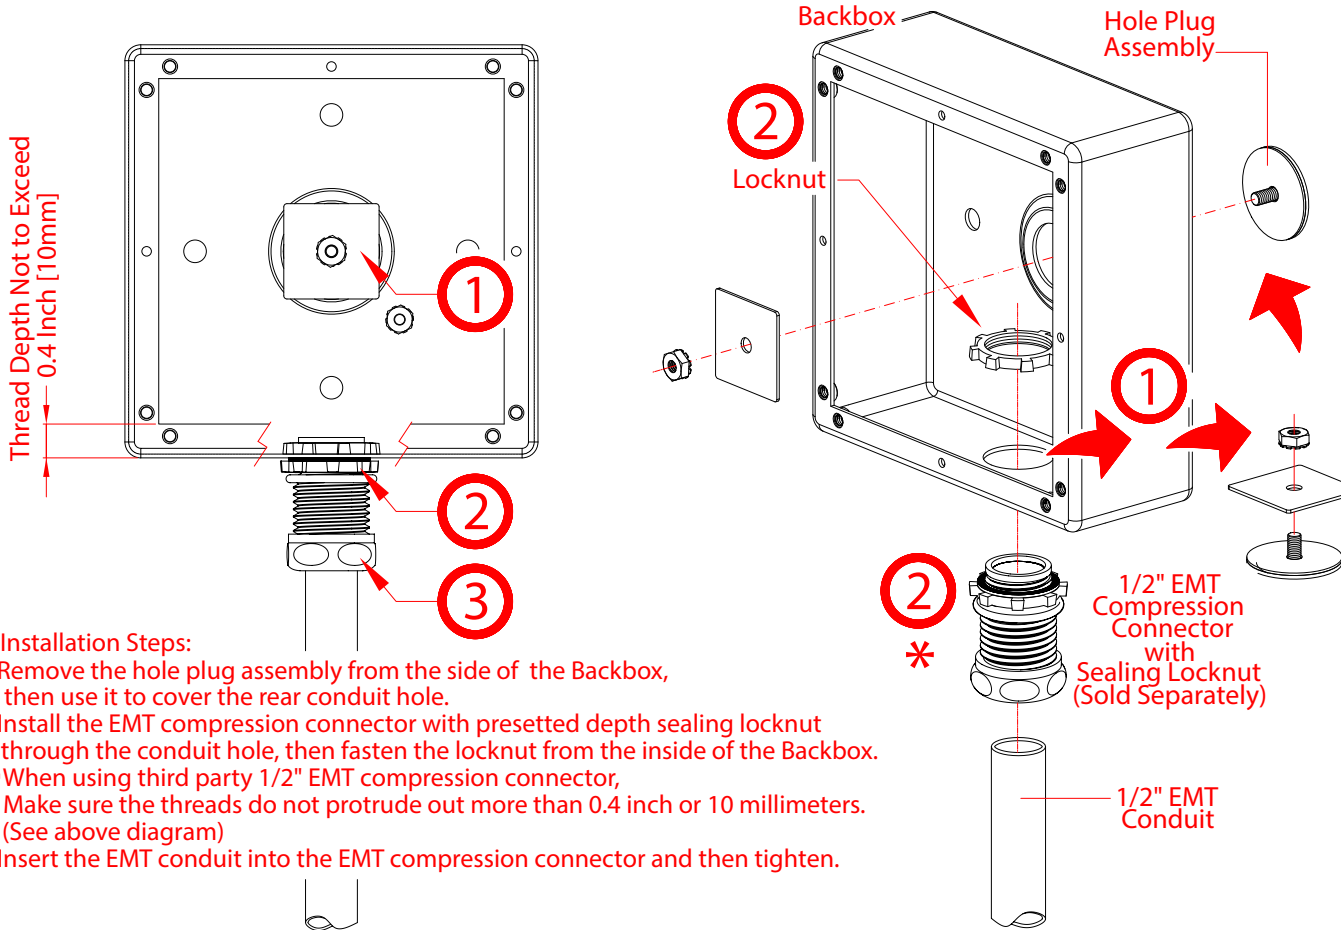

Thread Depth Not to Exceed 0.4 Inch [10mm]

Backbox

Hole Plug Assembly

Locknut

1/2" EMT Compression Connector with Sealing Locknut (Sold Separately)

1/2" EMT Conduit

Installation Steps:

- 1) Remove the hole plug assembly from the side of the Backbox, then use it to cover the rear conduit hole.
- 2) Install the EMT compression connector with presetted depth sealing locknut through the conduit hole, then fasten the locknut from the inside of the Backbox.
- \* When using third party 1/2" EMT compression connector, Make sure the threads do not protrude out more than 0.4 inch or 10 millimeters. (See above diagram)
- 3) Insert the EMT conduit into the EMT compression connector and then tighten.

Contacting CyberData

Corporate Headquarters

CyberData Corporation  
3 Justin Court  
Monterey, CA 93940, USA

Phone: 831-373-2601  
Fax: 831-373-4193  
<http://www.cyberdata.net/>

Sales: 831-373-2601 ext. 334  
Support: 831-373-2601 ext. 333  
Support Website: <http://support.cyberdata.net/>  
RMA Department: 831-373-2601 ext. 136  
RMA Email: [RMA@CyberData.net](mailto:RMA@CyberData.net)  
RMA Status: <http://support.cyberdata.net/>  
Warranty Information: <http://support.cyberdata.net/>

CyberData

The IP Endpoint Company

Installation Quick Reference

InformaCast Enabled RGB (Multi-Color) Strobe

011489




Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

Typical System Installation

\*More installation and mounting options are available in the Operations Guide.

802.3af Compliant Ethernet Switch

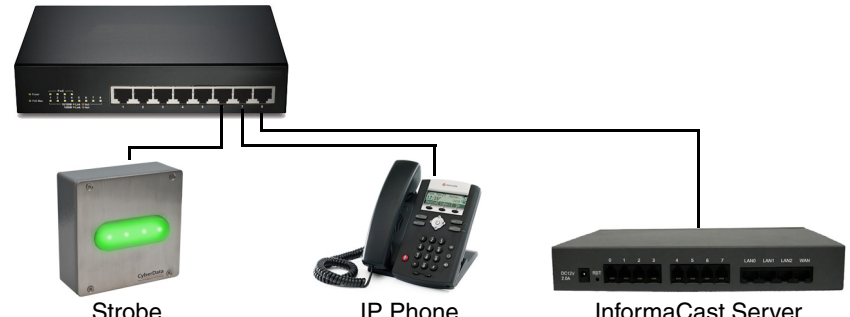

Strobe

IP Phone


InformaCast Server

Getting Started


- Download the *Operations Guide* PDF file, from the InformaCast Enabled RGB (Multi-Color) Strobe product page at: <https://www.cyberdata.net/products/011489>
- Create a plan for the locations of your InformaCast Enabled RGB (Multi-Color) Strobes.
- WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING:** This enclosure is not rated for any AC voltages!

Parts


(1) T-15H Torx Key



(1) Hole plug assembly

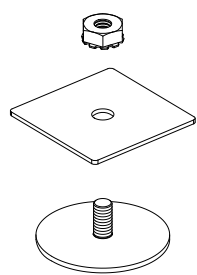


(4) Security Torx Screw

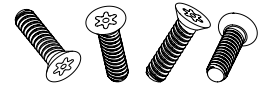


Optional Accessories (for gooseneck mounting)


(4) Carriage bolt nuts




(4) Carriage bolts




(4) Carriage bolt washers




Dimensions and Rear View with Mounting Holes

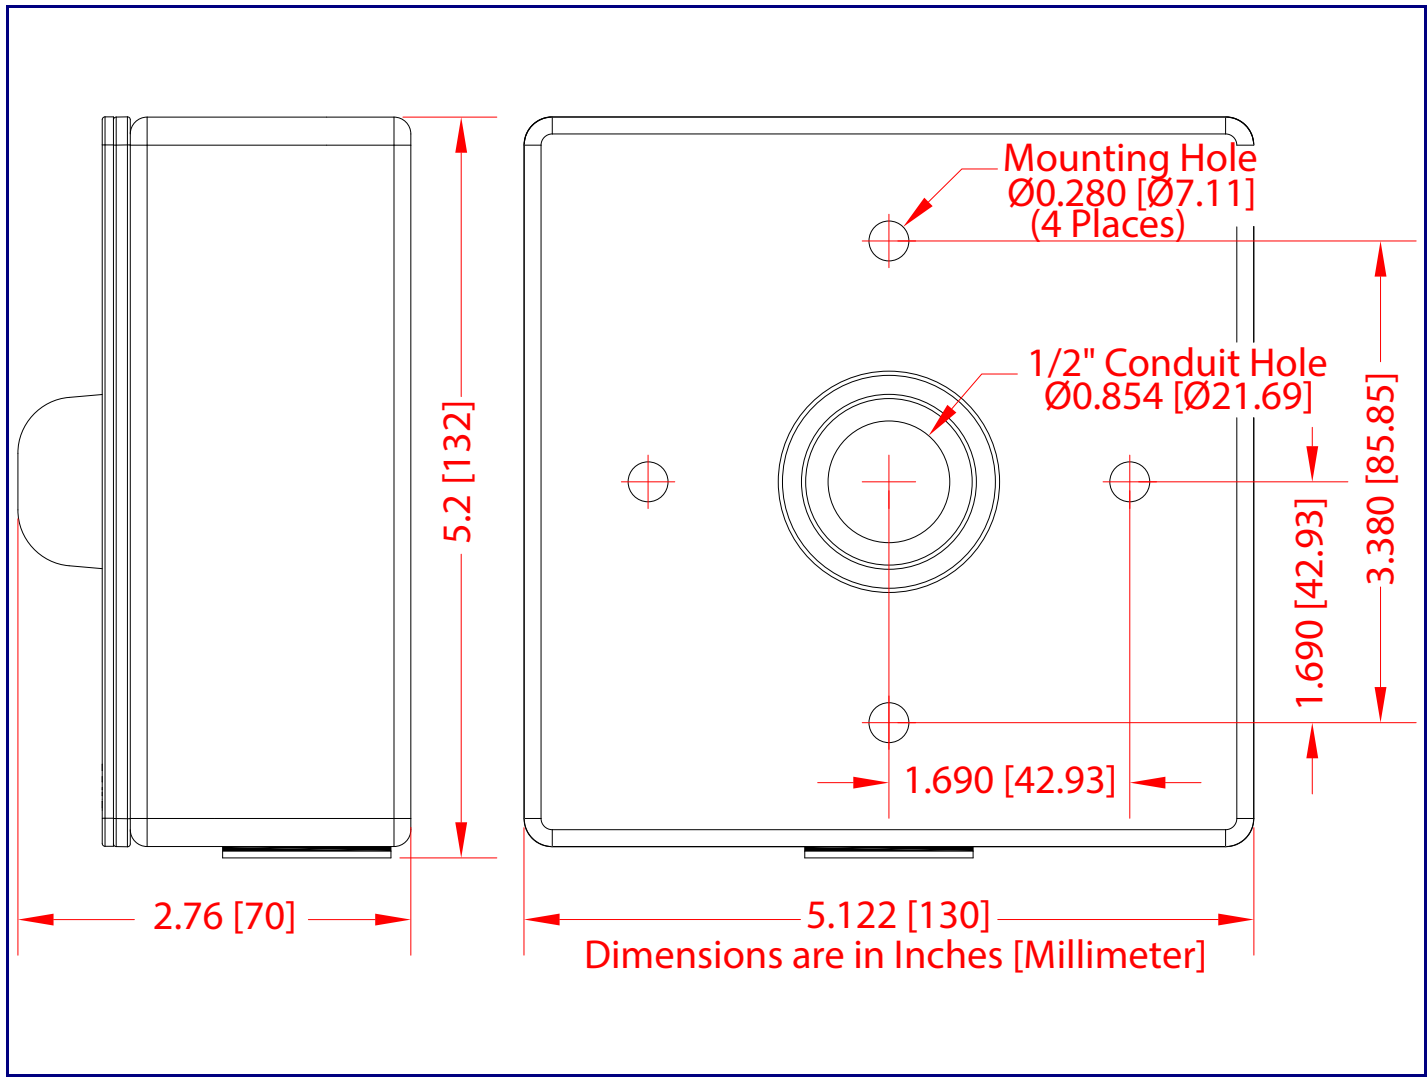

Connections

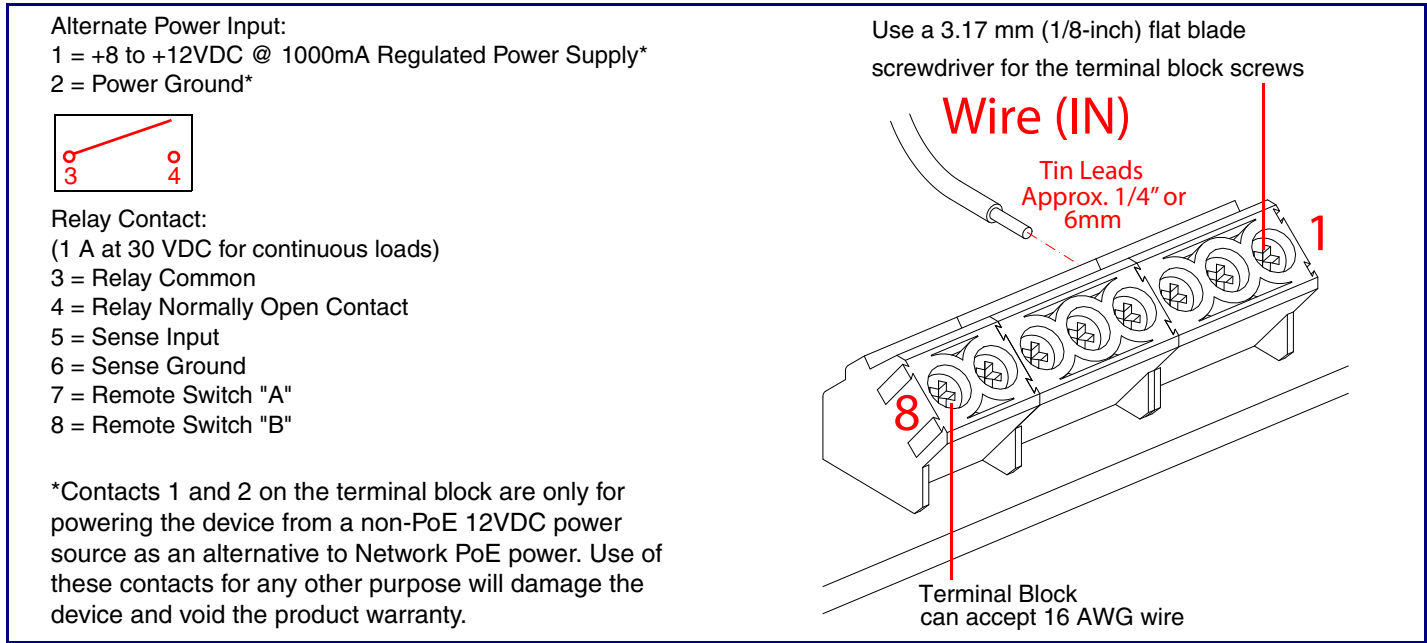

Connecting and Sealing the InformaCast Enabled RGB Strobe

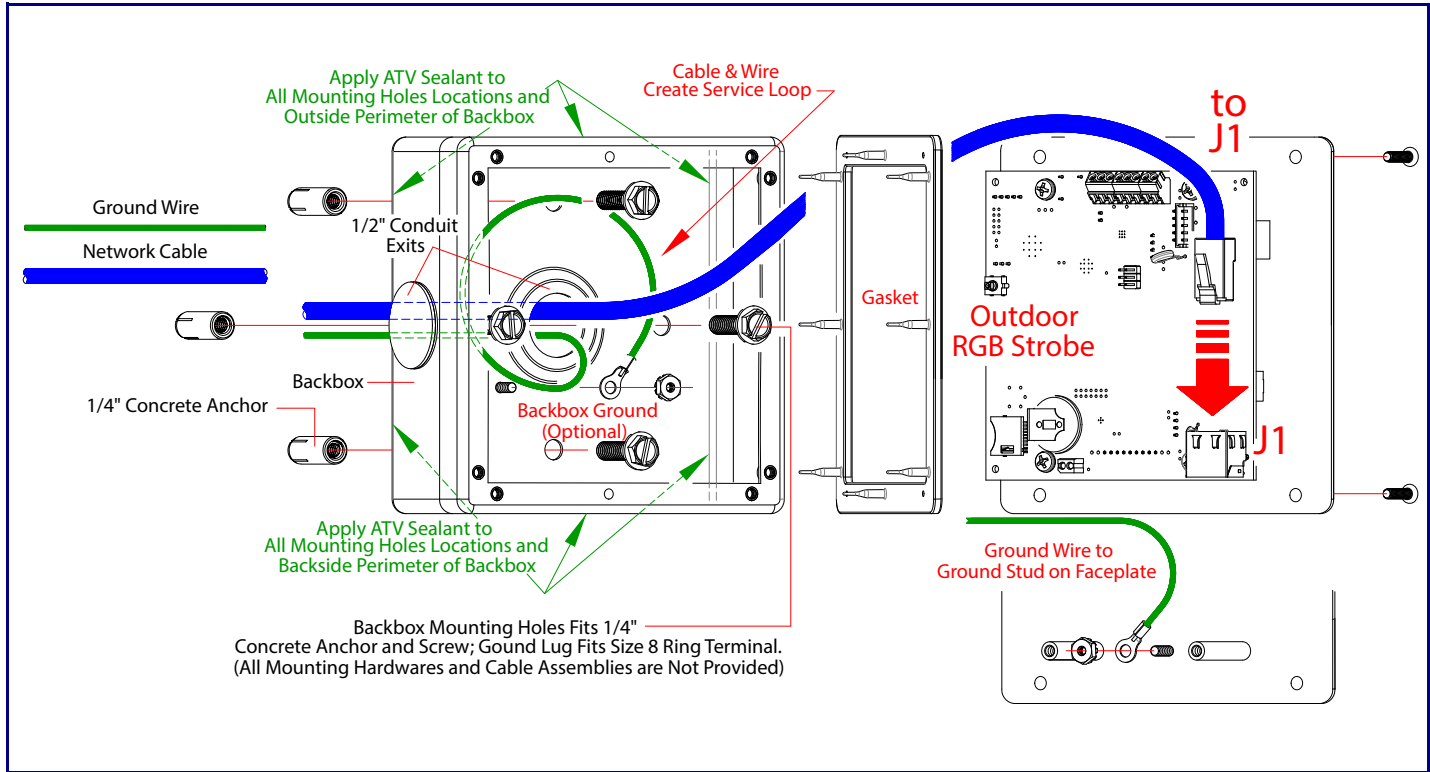

Installing the Ground Cable

