



GA100-24R




GA100-32R



GA100-32T

## Quick Installation Guide

### 1 Package List

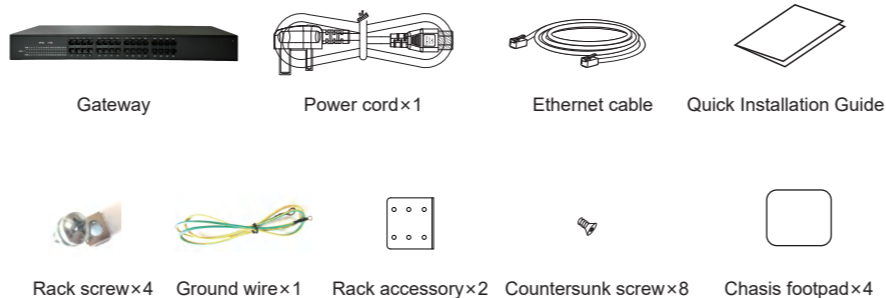

### 2 Interface Introduction

**Do not connect a PSTN line or a PBX extension line to FXS ports. Improper connection may cause damage to the device!**

1. See the figure below for the appearance of the product and follow it to connect lines.


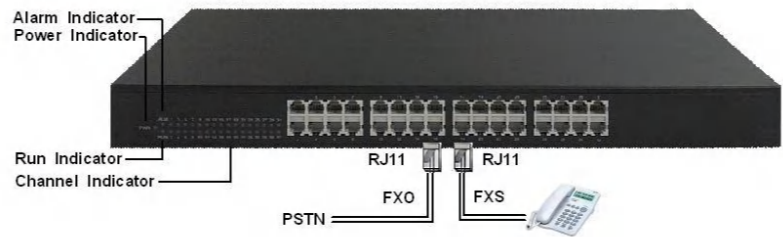


Figure 1 Front Panel



Figure 2 Rear Panel


- It is recommended to fix 4 rubber foot pads onto the chassis before you place the device directly on a desk or table for use. Make sure the device is well grounded before you connect the power cord! You'd better use a three-pin power socket, or use the grounding stud on the rear panel of the device for earthing.
- Go to the rear panel of the chassis and find the model label.
  - GA100-24R or GA100-32R: The FXS RJ11 ports are black; After power on, the corresponding channel indicator light is green.
  - GA100-32T: The FXO RJ11 ports are gray; After power on, the corresponding channel indicator light is red.
- Default IP Address: 192.168.1.179 (ETH1).  
Default Username: admin; Default Password: admin.
- See below for the pin layout and the exact line connection with necessary pins.

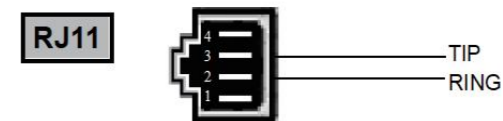

### 3 Security Warning

- As the device will gradually heat up while being used, please maintain good ventilation to prevent sudden failure, ensuring that the ventilation holes are never jammed.
- During runtime, if the alarm indicator lights up or flashes, it indicates that the device goes abnormal. If you cannot figure out and solve the problem by yourself, please contact our technicians for help. Otherwise it may lead to a drop in performance or unexpected errors.
- To ensure good connection, you shall use the lines from a same pair to connect with a channel while constructing a phone line by yourself.

## ① 包装清单

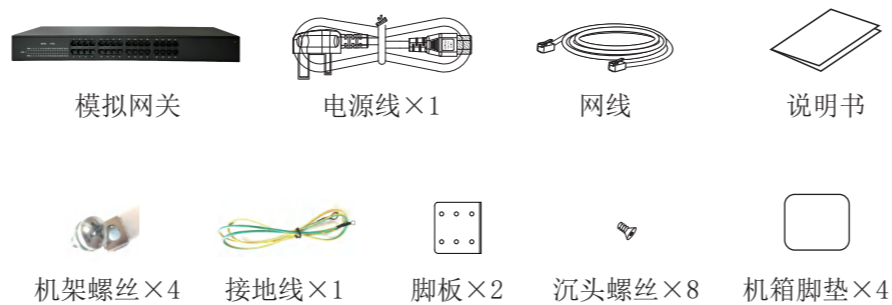

## ② 接口介绍

严禁将外线或PBX分机线等带电线路接入FXS接口，以免导致接口损坏！

1. 产品外观及连线如下所示。

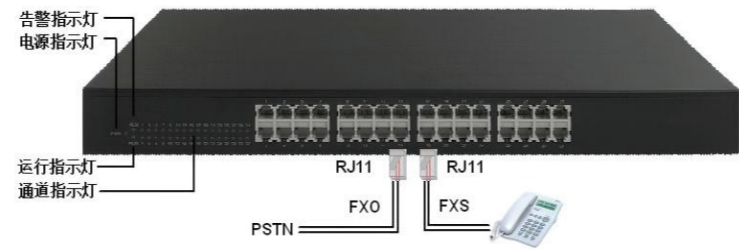


图1 正面图



图2 背面图

2. 平放桌面使用时建议安装4个脚垫。连接电源前，请务必确认可靠接地！建议使用三芯电源插座，也可通过机箱后侧的接地螺柱接地。

3. 请参照机箱底部的型号标签。


(1) GA100-24R或GA100-32R: FXS接口相应的通道指示灯为绿色，RJ11接口为黑色；

(2) GA100-32T: FXO接口相应的通道指示灯为红色，RJ11接口为灰白色。

4. 初始IP地址: 192.168.1.179 (ETH1)。

初始用户名: admin; 初始密码: admin。

5. 接口的引线示意图如下所示:

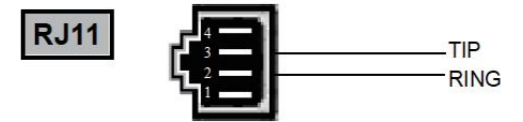

## ③ 注意事项

1. 设备工作时会产生热量，切勿阻挡机箱两侧的散热孔，以免发生意外。
2. 若发现运行时告警灯亮或闪烁，且无法自行排除故障，应及时联系我公司的技术人员，否则可能出现性能下降或发生意外错误的情况。
3. 为了确保可靠连接，自制转接线时，同一通道最好使用同一线对的线。

Fanvil Technology Co., Ltd.

Website: [www.fanvil.com](http://www.fanvil.com)

E-Mail: [sales@fanvil.com](mailto:sales@fanvil.com)      [support@fanvil.com](mailto:support@fanvil.com)

Tel: +86-755-2640-2199

Add: 13th Floor, Building 2, Runzhi R&D Center, Xin'an Street, Bao'an District, Shenzhen, Guangdong, China