



GA100-48R




GA100-144R

GA100-48&GA100-72R
GA100-96R&GA100-144R

Quick Installation Guide

1 Package List

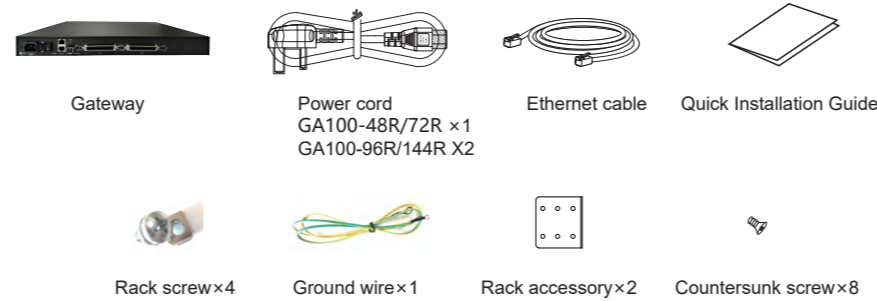

2 Interface Introduction

1. See the figure below for the appearance of the product and follow it to connect lines.



Figure 1 GA100-48R Front View



Figure 2 GA100-48R Rear View



Figure 3 GA100-144R Front View



Figure 4 GA100-144R RearView


2. Make sure the device is well grounded before you connect the power cord! You'd better use a three-pin power socket, or use the grounding stud on the rear panel of the device for earthing.
3. The corresponding channel LEDs for RJ21 turn on green..
4. Default IP Address: 192.168.1.179 (ETH1).
Default Username: admin; Default Password: admin.
5. The console port is for MINI USB which needs installing the driver with a chip of CH340.

3 Security Warning

1. As the device will gradually heat up while being used, please maintain good ventilation to prevent sudden failure, ensuring that the ventilation holes are never jammed.
2. During runtime, if the alarm indicator lights up or flashes, it indicates that the device goes abnormal. If you cannot figure out and solve the problem by yourself, please contact our technicians for help. Otherwise it may lead to a drop in performance or unexpected errors.
3. To ensure good connection, you shall use the lines from a same pair to connect with a channel while constructing a phone line by yourself.

1.

① 包装清单

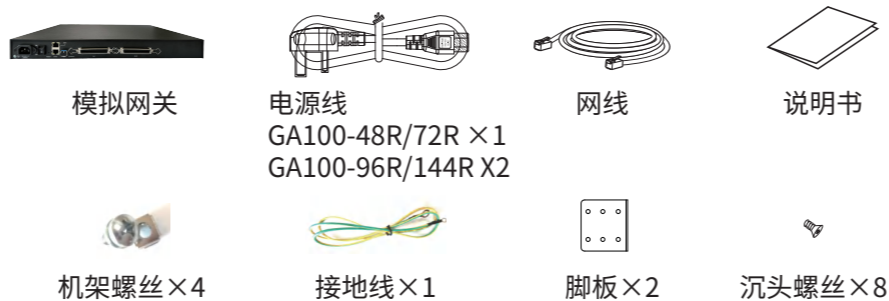

GA100-144R 后视图

② 接口介绍

1. 产品外观及连线如下所示。



GA100-48R 正视图



GA100-48R 后视图



GA100-144R 正视图

2. 连接电源前，请务必确认可靠接地！建议使用三芯电源插座，也可通过机箱后侧的接地螺柱接地。
3. RJ21接口相应的通道指示灯为绿色。
4. 初始IP地址：192.168.1.179（ETH1）。
初始用户名：admin；初始密码：admin。
5. 串口为MINI USB类型，需要安装驱动，驱动芯片为CH340。

③ 注意事项

1. 设备工作时会产生热量，切勿阻挡机箱两侧的散热孔，以免发生意外。
2. 若发现运行时告警灯亮或闪烁，且无法自行排除故障，应及时联系我公司的技术人员，否则可能出现性能下降或发生意外错误的情况。
3. 为了确保可靠连接，自制转接线时，同一通道最好使用同一线对的线。