


**1 Package List**

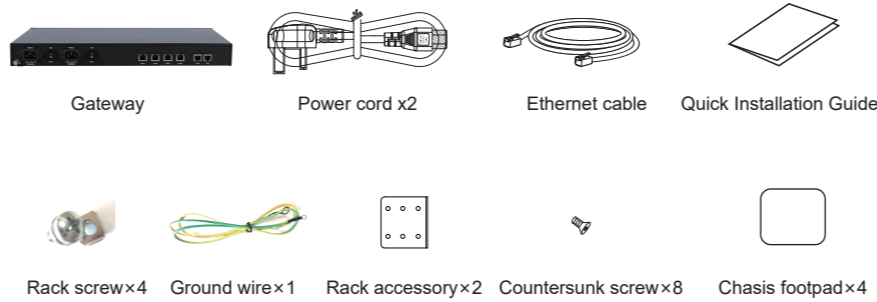

**2 Interface Introduction**

1. Device Line Connection: See the figure below for the appearance of the product and follow it to connect lines.


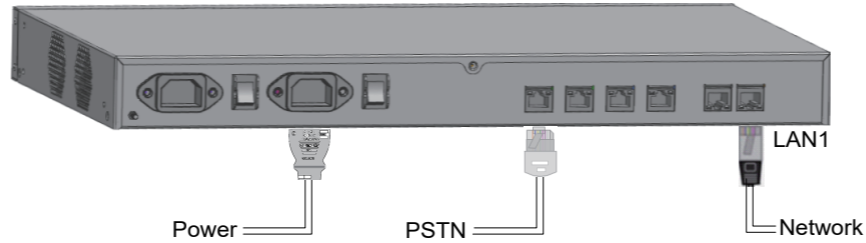


Figure 1 GA200 Series

2. RJ45 Pin Layout & Connection.

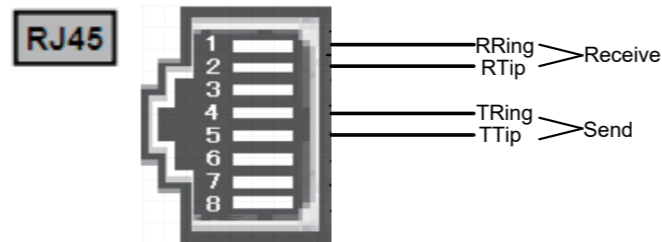

2. Device Installation: Fix 4 rubber foot pads onto the chassis before you place the device directly on a desk or table for use. If you need to place it on the rack, fix the 2 angle brackets onto the chassis.

3. Power Cord Connection: Each device has two power interfaces to meet the requirement for power supply hot backup. It is allowed to connect either or both of them.

Note: You'd better use a three-pin power socket which supports grounding, or use the grounding stud on the rear panel of the device for earthing.

4. WEB Login: Default IP Address: 192.168.1.179 (LAN1).


**3 Security Warning**

1. As the device will gradually heat up while being used, please maintain good ventilation to prevent sudden failure, ensuring that the ventilation holes are never jammed.

2. During runtime, if the alarm indicator lights up or flashes, it indicates that the device goes abnormal. If you cannot figure out and solve the problem by yourself, please contact our technicians for help. Otherwise it may lead to a drop in performance or unexpected errors.


3. It is suggested to put the device in LAN; please avoid using 80, 5060 or 2727 as SIP port and prevent such hazards as hacker attacks, information leakage, password crack when the device is directly connecting to the internet.

## ① 包装清单

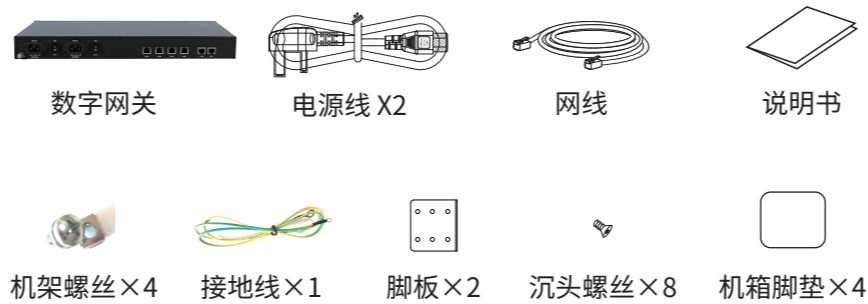


## ② 接口介绍

1. 产品外观及连线如下所示。

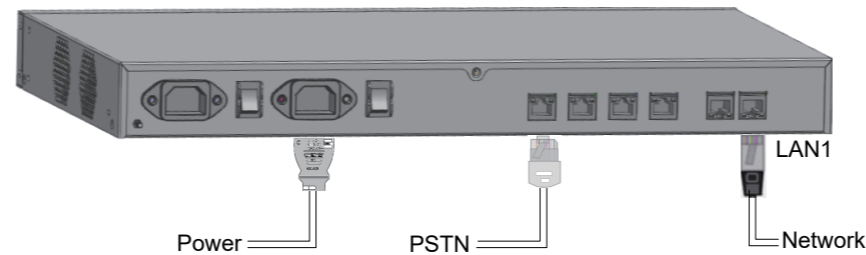

图示1 GA200系列

2. RJ45连接线引线示意图。

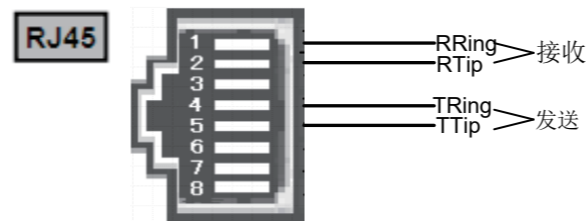

2. 设备安装：平放桌面使用时建议安装4个脚垫。如果需要安放到机架上，先将挂耳安装到机箱上，再固定机箱到机架上。
3. 电源连接线：本设备提供具有主从热备份功能的双电源，可仅用一个电源或全部连接。建议使用带接地的三芯电源插座，或者通过机箱后侧的接地螺柱接地。
4. 初始IP地址：192.168.1.179 (ETH1)。

## ③ 注意事项

1. 设备工作时会产生热量，切勿阻挡机箱两侧的散热孔，以免发生意外。
2. 若发现运行时告警灯亮或闪烁，且无法自行排除故障，应及时联系我公司的技术人员，否则可能出现性能下降或发生意外错误的情况。
3. 为了确保可靠连接，自制转接线时，同一通道最好使用同一线对的线。