


PM Camera Pole Mount Adapter



Features


- Used for Pole Mounting
- Stainless Steel Clasp
- Aluminum Die-Cast Alloy Mounting Board

Dimensions

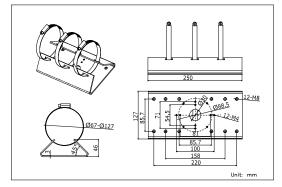

Installation

 
1. Counter-rotate the rotary knob (A) to open the clamp.




2. Thread the clamp through the mounting board holes.



 4. Optional: Adapter can be used with some wall mount brackets for vertical pole mounting, as follows:

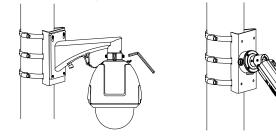



Order Model

ΡM

- Hikvision USA Inc., 908 Canada Court, City of Industry, CA 91748, USA Hikvision Canada, 4485 Dobrin, St-Laurent, Quebec, Canada, H4R 2L8 Tel: +1-909-895-0400 • Toll Free in USA: +1-866-200-6690 • E-Mail: sales.usa@hikvision.com • www.hikvision.com
- © 2015 Hikvision USA Inc. All Rights Reserved Specifications subject to change without notice.

Specifications

	PM
Appearance	Hikvision white
Range of	It can be used with some wall mount brackets
Application	Size of clamp: Φ67 mm to 127 mm (2.64" x 5")
Material	Aluminum alloy
Dimensions	127 mm × 46 mm × 250 mm (5" x 1.81" x 9.84")
Weight	1205 g (2.66 lbs)

NOTES:

The screw hole sites should be noted when using adapter with wall mount bracket.

Pole's load capacity should be more than three times the weight of camera and bracket.

Clamp's load capacity is 6.5 kg.

3. Clasp the clamp around the pole and rotate the rotary knob clockwise to tighten.

