
 
 
 
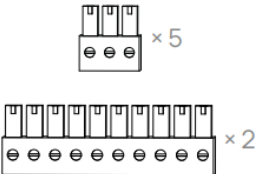
 
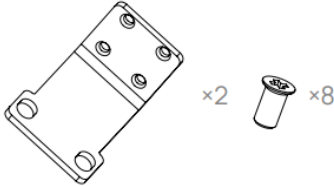


AP08 Installation and Connection

Package Content

				
AP08	USB 3.0 (A - B) Cable (2.5m)	Power Adapter (3m)	Quick Start Guide	Male Phoenix Connector (Pitch 3.81 mm)
In a 19-Inch Rack				
Under a Table/On a Wall				
				
Expansion Nuts and Screws		Mounting Ears and Screws (4 screws pre-installed on AP08)		


NOTE

We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in poor performance.


Installation

A. In a 19-Inch Rack (compliant with the IEC60297 Standard)


1. Remove the mounting ear screws from each side of AP08 (2 screws per side).

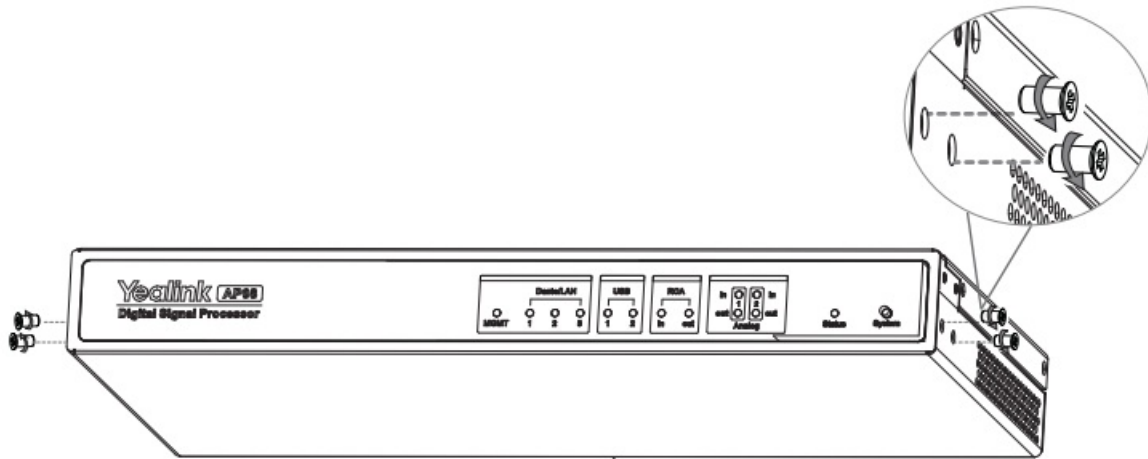

2. Install the mounting ears on both sides of the AP08.

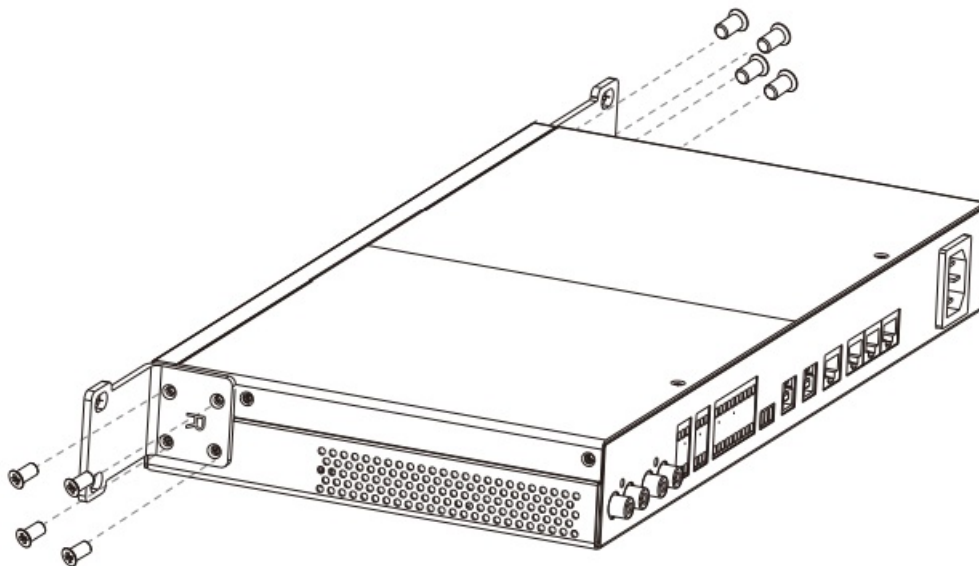


3. Push the AP08 into the rack, and fix it to the rack with screws (not included).

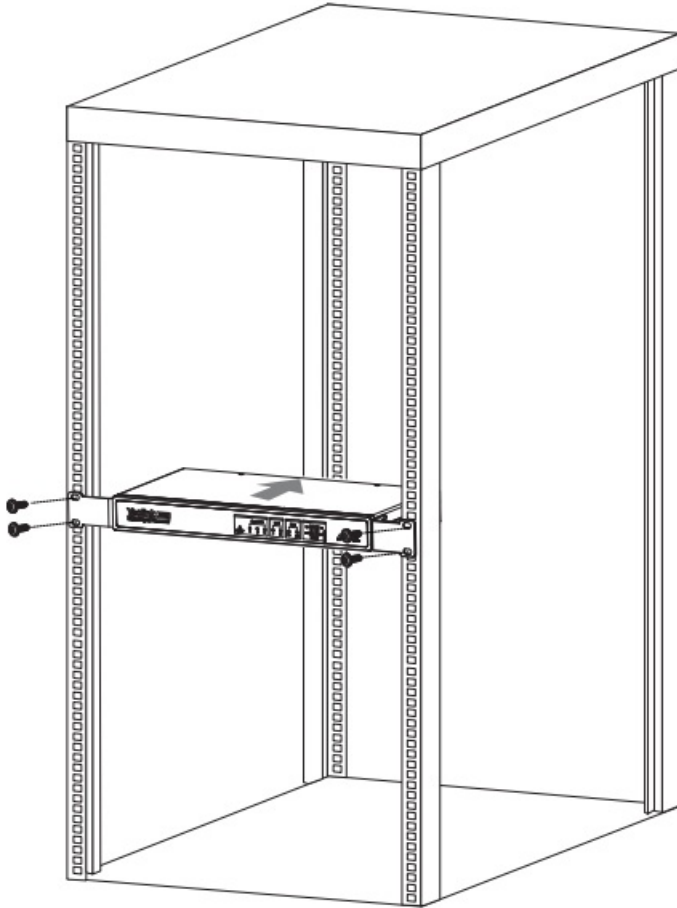

B. Under a Table or On a Wall


1. Remove the mounting ear screws from each side of AP08 (2 screws per side).
2. Install the mounting ears on both sides of the AP08.
3. Use the mounting ears to mark holes on the mounting surface.
4. Drill holes and insert the expansion nuts.

5. Fix the AP08 on the mounting surface with the expansion screws.


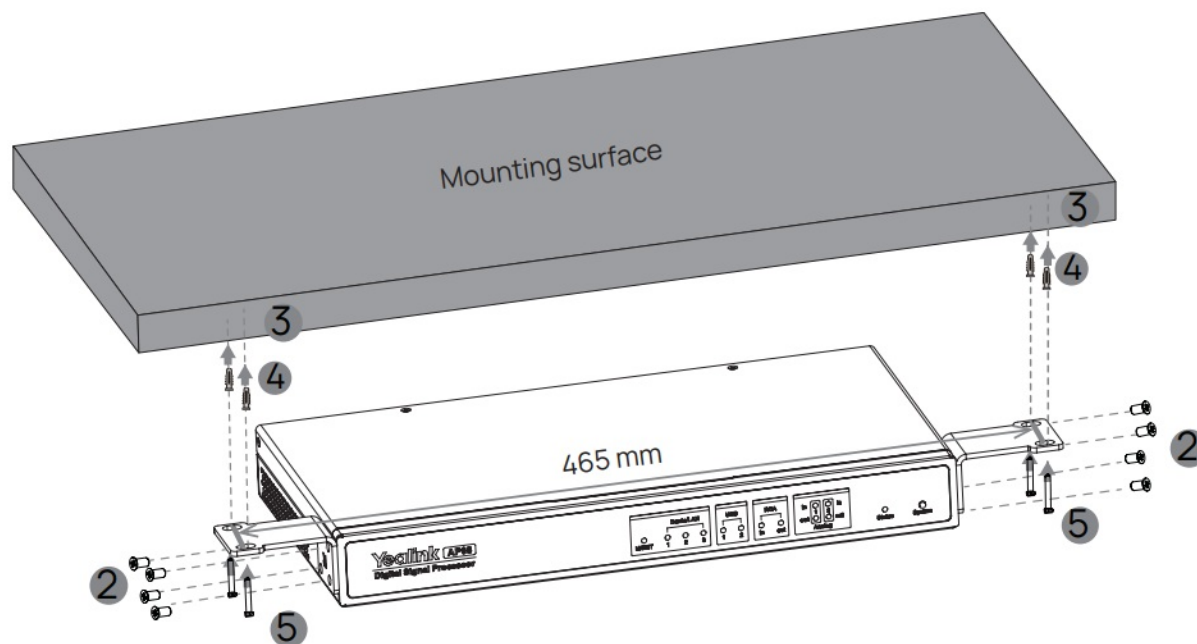


Connection



Analog in/out Connector

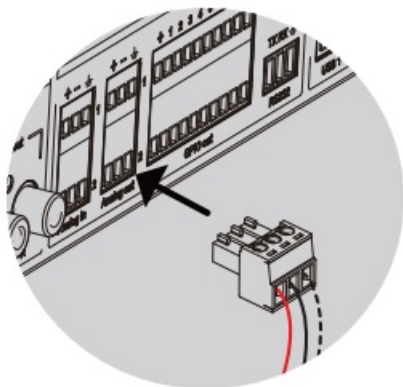


 The lines are not included, please purchase separately.

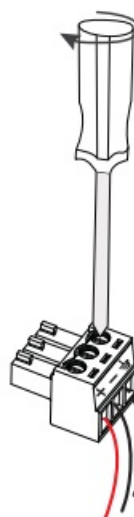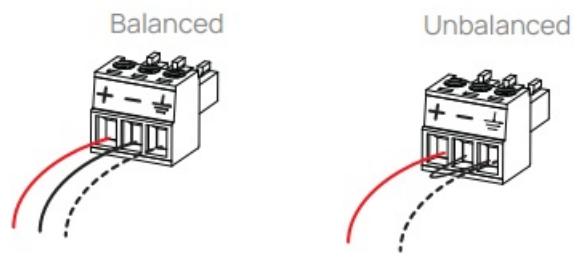

RS-232 Connector

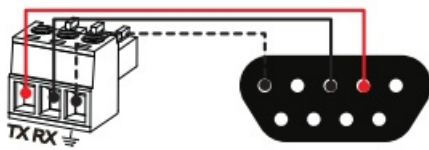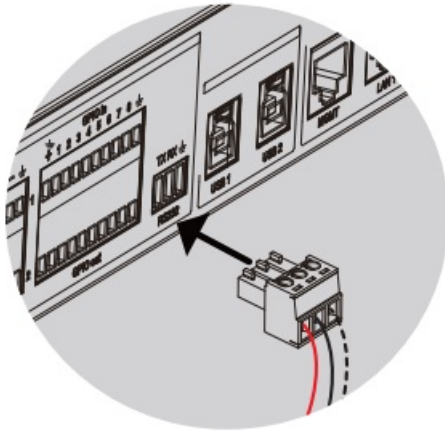

DB9 Female Connector

 The lines are not included, please purchase separately.

