


# Mitel 6930/6930w SIP Phone - Quick Reference Guide

## Getting started

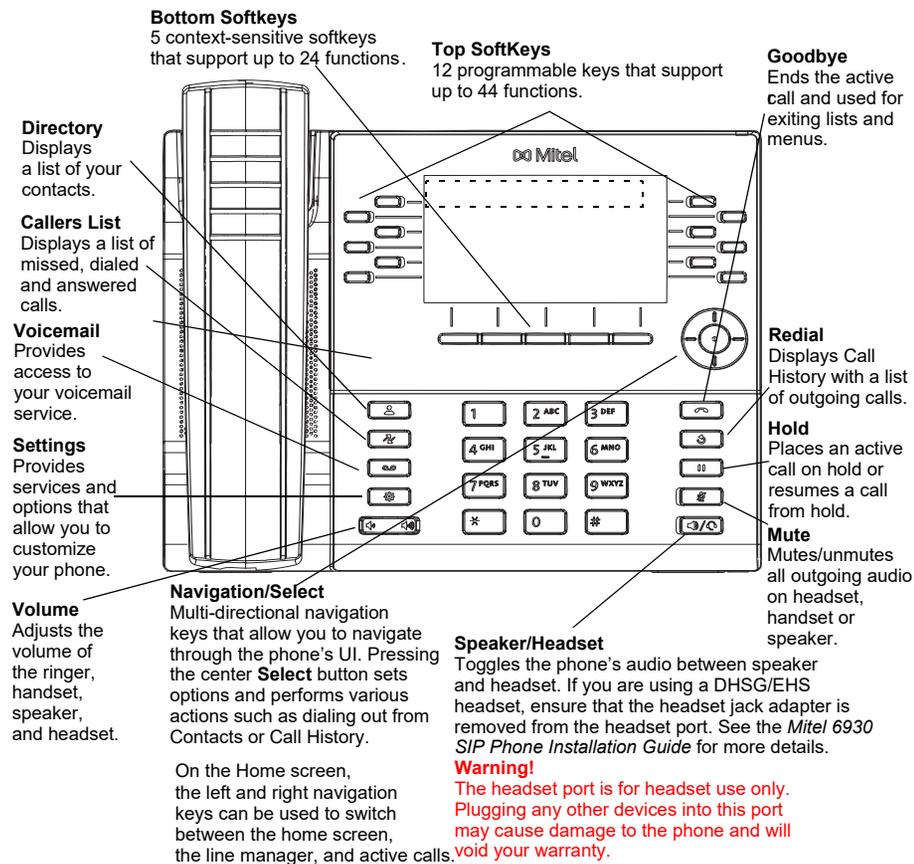

## Information Regarding Model Variants

The 6930L and 6930Lt variant has the Bluetooth circuitry removed and so all associated features and capability relating to Bluetooth are not available. Any information within this user guide that relates to Bluetooth wireless capabilities do not apply to the 6930L or 6930Lt variants.

A new variant of the 6930 IP Phone is available called the 6930w IP Phone. The 6930w IP Phone is physically identical to the 6930 IP Phone. There are new features supported by the 6930w IP Phone relative to the 6930 IP Phone, namely embedded Wi-Fi, Bluetooth 5.2, IEEE 802.3az standard (Energy Efficient Ethernet) capability. The 6930w IP Phone also supports the same accessories as the current 6930 IP Phone.

## Basic call handling

### Making a call

1. Lift the handset, press the **Line** key or press the  key, and at the dial tone, enter the number.
2. Press the **Line / Call** appearance button and at the dial tone, enter the number.



### Ending a call

Place the handset back in its cradle, press the **Ignore** softkey, or press the  key.

### Answering a call

Lift the handset, press the **Answer** softkey or press the  key for handsfree operation.

### Redialing

Press the **Redial** softkey once or the  key twice to call the last dialed number or

Press the  key once to access the Call History application that displays a list of recently dialed numbers. Use the up and down navigation keys to scroll through the entries and select a number. Press either the **Select** button or the **Dial** softkey to redial the selected number.

# Mitel 6930/6930w SIP Phone - Quick Reference Guide

## Muting or unmuting a call

Press the  key while on an active call to mute the microphone for your handset, headset, or speaker. Press the  key again to unmute the audio.

## Holding and resuming a call


1. To place an active call on hold, press the  key. A  (hold) icon flashes on the respective **Line** key.
2. To resume the call, press the  key again or press the respective **Line** key.

**Note:** For details on all the available features and options, refer to the *Mitel 6930 SIP Phone User Guide*.

## User Interface (UI) overview


### Home screen

The Home (default) screen is displayed when the phone is in the idle state. The Home screen displays the current line, status indicators, status messages, the date and time, and a list of configurable top and bottom softkeys.

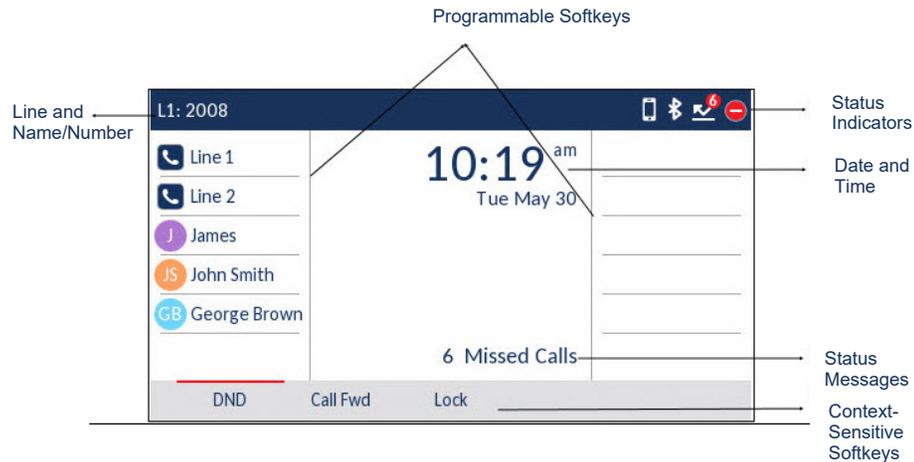

## Call screen


When on an active call, caller's avatar, name, number, and the call-duration timer are displayed. The context-sensitive softkeys are updated with applicable call-handling features.

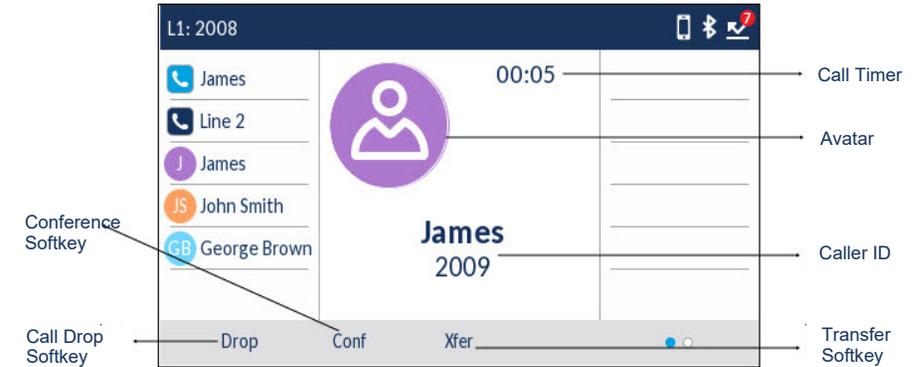

## Applications

### Directory

The Directory application stores personal phone book and directory. The Mitel 6930 SIP phone supports a localized personal directory as well as enhanced functionality allowing for interoperability with LDAP (corporate) directories.

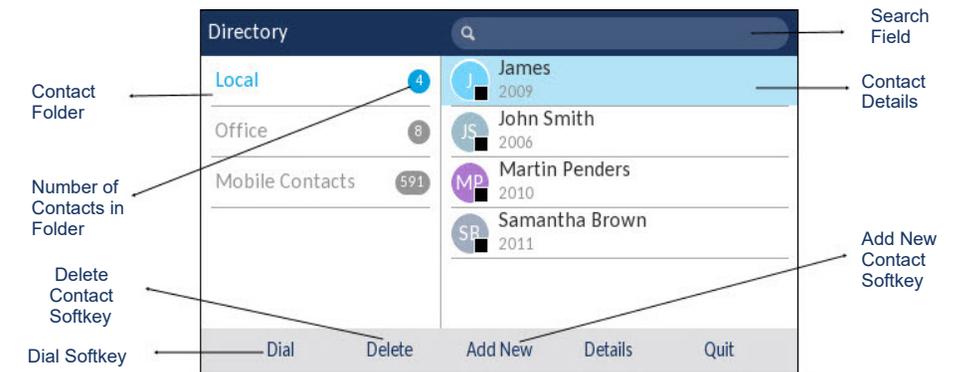


# Mitel 6930/6930w SIP Phone - Quick Reference Guide

## Making a call using the Directory

1. Press the  key to access the **Directory**.
2. Navigate to the respective contacts folder and scroll through the contacts by using the navigation keys  
or  
Enter characters using the keypad and press the **Search** softkey to use the search feature.
3. When the applicable contact is highlighted, press the **Select** button or the **Dial** softkey to place a call using the entry's default phone number  
or  
To place a call to a different phone number defined for the entry (for example, a mobile number), press the right navigation key, highlight the phone number you want to call using the up or down navigation keys, and press the **Select** button or the **Dial** softkey.

## Call History

The Call History application displays a list of your missed, outgoing and received calls. You can view, delete and dial out to call history entries as well as copy entries to your Contacts application.

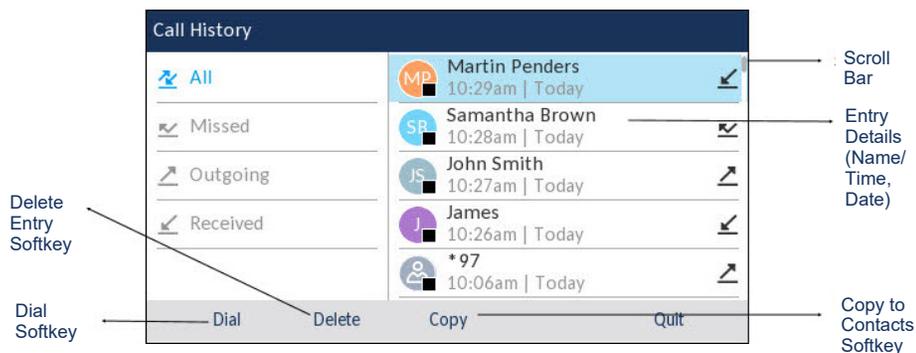

## Using the Call History application

1. Press the  key to access the Call History application.

2. Scroll through the lists by using the navigation keys. To view additional details for an entry, press the **Right** navigation key when the entry is highlighted.
3. Press the **Select** button or the **Dial** softkey to place a call to the respective entry  
or  
Press the **Copy** softkey to copy the entry to your Contacts application  
or  
Press the **Delete** softkey to delete the entry from your Call History.

## Voicemail

When voicemail functionality is enabled, the MWI LED on the Mitel 6930 SIP phone flashes red and the  (Voicemail) icon displays on the status bar indicating that voicemail messages are available.

You can access your voicemail service by pressing the **Voicemail**  key.

**Note:** Voicemail functionality must be configured by your System Administrator.

## Mobilelink

The Mitel 6930 SIP Phone supports Mobilelink, a feature that provides seamless mobile integration using Bluetooth wireless technology. Mobilelink highlights include the ability to:


- Sync your mobile phone's contact list with your 6930 SIP Phone.
- Answer a mobile phone call using your 6930 SIP Phone.
- Move active calls between the 6930 SIP Phone and your mobile phone.

**Note:** Mobilelink features are available only if your Administrator has enabled them. Contact your Administrator for details on how to enable mobilelink on your phone.

## Pairing a mobile phone using Bluetooth

1. Press the  key, navigate to **Bluetooth** setting, and press the **Select** button or **Select** softkey.
2. Press the **Turn On** softkey to enable Bluetooth functionality.  
Ensure your mobile phone is discoverable as the Mitel 6930 SIP Phone automatically scans for available Bluetooth devices.

# Mitel 6930/6930w SIP Phone - Quick Reference Guide

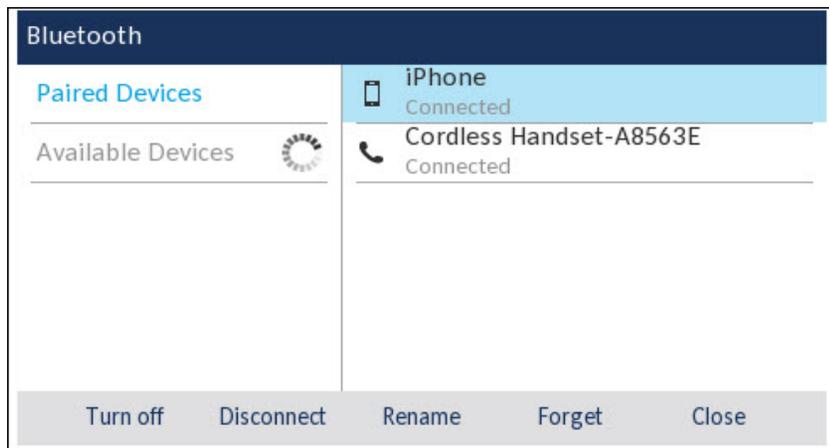

**Note:** For information on how to make your mobile phone Bluetooth discoverable, refer to the documentation provided with your respective mobile phone.

3. When your mobile phone has been discovered, use the navigation keys to highlight the respective entry in the list of available devices and press the **Select** button or **Pair** softkey.

A Bluetooth pairing request displays on both the Mitel 6930 SIP Phone and your mobile device.

4. Ensure the pairing code matches on both devices and press **Yes** on the Mitel 6930 SIP Phone and acknowledge the pairing request on your mobile phone. The Mitel 6930 SIP Phone attempts to pair the mobile phone and if successful, automatically attempts to connect to the mobile phone.

**Note:** If pairing or connecting fails, a failed error message displays on screen. Press **Retry** to attempt to pair or connect again, or **Cancel** to cancel the attempt.

5. Press **OK** to acknowledge the successful connection. The connected mobile phone is added to the list of **Paired Devices** and is ready to use.

## Syncing mobile contacts

The Mitel 6930 SIP Phone automatically attempts to sync your mobile contacts to the Directory application upon pairing and connection.

To manually update your mobile contacts:

1. Press the  key to access the Directory application.
2. Navigate to the **Mobile** contacts folder.

3. Press the **Reload** softkey.


The Mitel 6930 SIP Phone attempts to re-synchronize and update your mobile contacts.

**Note:** If the update fails, a failed to retrieve contacts message displays on screen. Press **Retry** to attempt to update again, or **Cancel** to cancel the attempt.

## Answering an incoming mobile call using your Mitel 6930 SIP Phone

When your mobile phone is paired and connected to your Mitel 6930 SIP Phone, incoming calls on your mobile phone will be indicated on your 6930 SIP Phone as well.

**Note:** A **Mobile** softkey must be configured to answer an incoming mobile call using your Mitel 6930 SIP phone. For more information, refer to the *Mitel 6930 SIP Phone User Guide*.

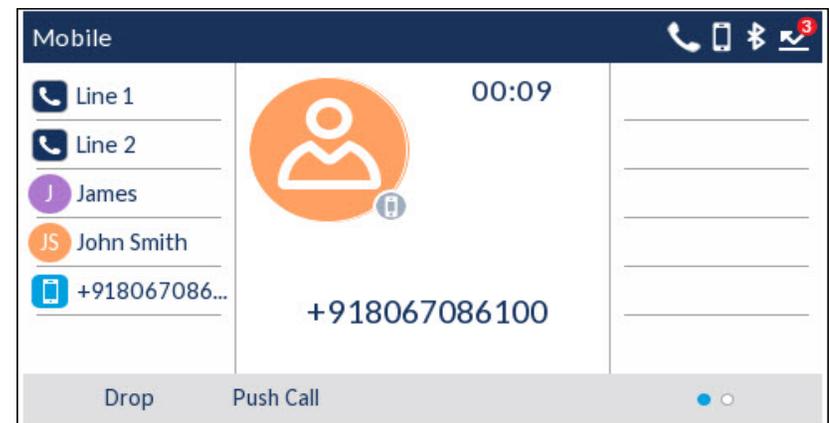

Lift the handset or press the  key, blinking  **Bluetooth Line** key, or **Answer** softkey for handsfree operation.

## Moving the audio of an active mobile call between your mobile phone and Mitel 6930 SIP Phone

Press the **Push call** softkey to push the mobile call's audio from your Mitel 6930 SIP Phone to your mobile phone or

Press the  **Mobile** softkey to pull the mobile call's audio from your mobile phone to the Mitel 6930 SIP Phone.

You can push and pull mobile call audio from the Mitel IP Phone only.

# Mitel 6930/6930w SIP Phone - Quick Reference Guide

**Note:** For other functions, such as viewing mobile call history details, dialing a mobile call history entry, adding a mobile call history entry to Contacts, and deleting mobile call history, refer to the *Mitel 6930 SIP Phone User Guide*.

## PCLink

The Mitel 6930 IP Phone supports PCLink, a feature that enables the IP Phone to be used as the audio device for PC or MAC video collaboration with all the supported video collaboration applications, for both Windows 10 and MAC operating systems, through the IP Phone's Bluetooth interface. For more information, see:

- *PCLink for 6920w, 6930 and 6940 Mitel IP Phone Quick Reference Guide - MAC*
- *PCLink for 6920w, 6930 and 6940 Mitel IP Phone Quick Reference Guide - Windows*

## Advanced call handling

The Mitel 6930 SIP Phone provides a method for transferring calls through the **Transfer** softkey.

### Call Transferring

1. Ensure you are on active call with the party you wish to transfer.
2. Press the **Xfer** softkey. The active call is placed on hold.
3. Enter the transfer recipient's number and press the **Xfer** softkey.

### 3-Way Conference Call

1. Ensure you are on active call with one of the contacts with whom you want to create a conference.
2. Press the **Conf** softkey. The active call is placed on hold.
3. Enter the conference target's number and press the **Dial** softkey.
4. Wait for an answer and then press the **Conf** softkey to complete the 3-way conference call.

## Speed Dial configuration

A **Speed Dial** key allows you to dial a specified number with one key press. **Speed Dial** keys can be useful as they can be programmed to dial directly to an internal or external number.

You can also transfer calls to or create conference calls using your **Speed Dial** keys in place of dialing out manually.

**Note:** Configuring a speed dial key using the press-and-hold method is only available if enabled by your System Administrator.

### Configuring a Speed Dial key

1. Press and hold the non-configured softkey, dialpad key, or expansion module key (for approximately 3 seconds) until the **Speed Dial Edit** screen is displayed.

2. In the **Label** field, enter a description to apply to the key.

**Note:** Use the **ABC** softkey to specify uppercase letters or lowercase letters when entering the label.

3. Press the down navigation key to move to the **Number** field and enter the number using the dialpad keys.
4. Press the **Save** softkey to save the speed dial information to the key you selected.

The screenshot shows the 'Speed Dial Edit' interface. It has a dark blue header with the title 'Speed Dial Edit'. Below the header, there are three rows, each representing a speed dial key. The first row is 'Speed Dial Key 1' with an empty text input field and a 'Line: 1' label below it. The second row is 'Speed Dial Key 2' with a 'Number' label and a 'Line: 1' label below it. The third row is 'Speed Dial Key 3' with a 'Number' label and a 'Line: 1' label below it. At the bottom of the screen, there is a light gray bar containing five softkeys: 'Save', 'Backspace', '123', 'Pause', and 'Cancel'.

## Connecting to Wi-Fi on 6930w IP Phone

The 6930w IP Phone has built-in wireless connectivity and functions as an 802.11a/b/d/g/n dual-band wireless network device which allows your phone to join a secure, high-speed network.


You can connect your phone to either an enterprise network or a home network:

- [“Connecting to a WPA2 Enterprise network”](#)
- [“Connecting to a home network”](#)

# Mitel 6930/6930w SIP Phone - Quick Reference Guide


## •“Connecting to Hidden Network”

To connect to a Wi-Fi network, Wi-Fi functionality must be enabled by your System Administrator. If Wi-Fi is not enabled **Please contact system administrator to enable Wifi** message is displayed on the phone. Press **Close** softkey and contact your System Administrator to enable Wi-Fi.

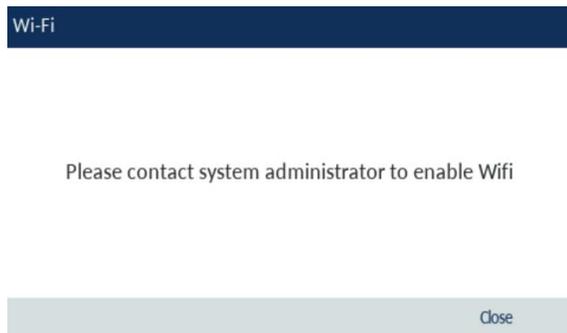

## Connecting to a WPA2 Enterprise network

1. Navigate to **Settings > Wi-Fi**.

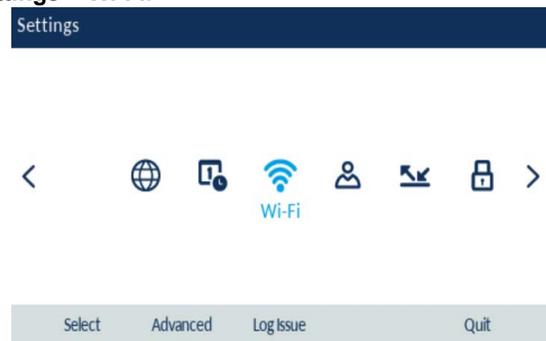


2. The **Available Networks** settings menu is displayed.



3. Select the name of the enterprise Wi-Fi network; for example, Mitel from **Available Networks** and press **Connect** softkey.

**Note:** You can connect to only one network at a time.


4. Enter the domain username of your enterprise network and select the **Save** softkey.

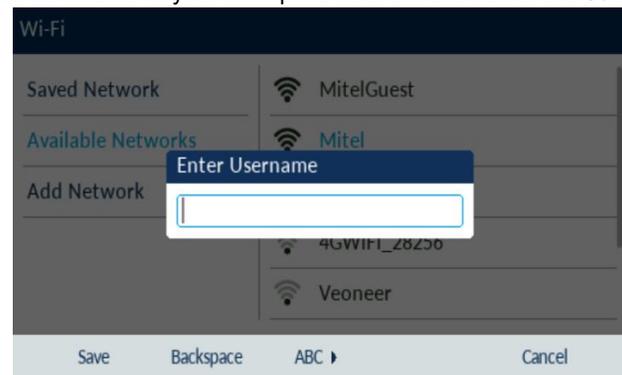

5. Enter the domain password of your enterprise network and select the **Save** softkey. Advanced characters can be entered by pressing the dialpad keys multiple times. The following table identifies the characters that you can use and the order in which they are accessible. For detailed information on the characters, refer to **Dialpad keys**


# Mitel 6930/6930w SIP Phone - Quick Reference Guide

section in the **Mitel 6930/6930w IP Phone User Guide**.

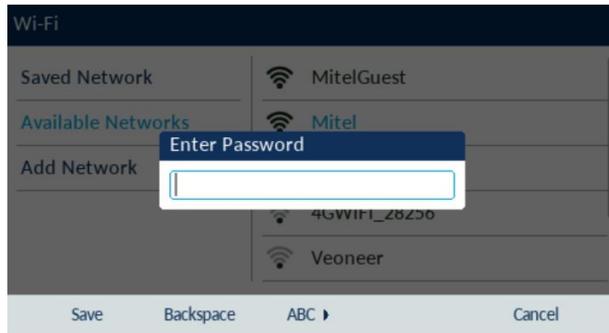



**Note:** If you enter an incorrect password, **Connection failed** dialog box appears.

Key	Characters
0	0 +
1	1 . : ; = _ , - ' & ( ) [ ] \$ !
*	* <SPACE>
#	# / \ @

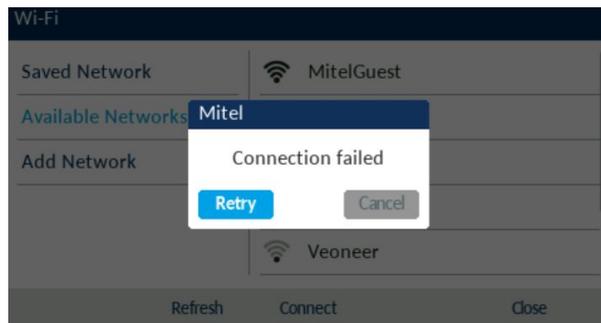

6. The **Save Settings** dialog box appears. Tap **Yes** to reboot the phone and apply the

changes.

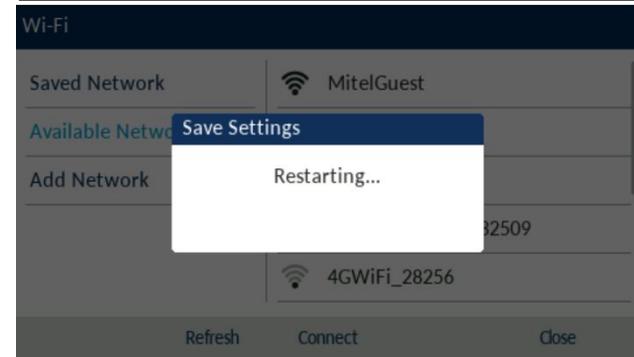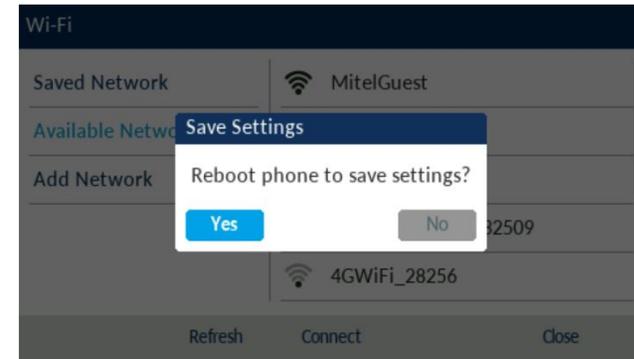

**Note:** After the phone restarts the LAN and PC ports are disabled (as it relates to network communications).


- After the phone reboots, it is successfully connected to the network. The connected network (Mitel) is listed under **Saved Network**.
- To disable Wi-Fi and use the LAN port again, navigate to **Settings > Wi-Fi** and press the **Disconnect** softkey. The **Save Settings** dialog box appears.
- Tap **Yes** to reboot the phone and apply the changes.

# Mitel 6930/6930w SIP Phone - Quick Reference Guide

## Connecting to a home network

**Note:** You can connect to either a WPA2 or a WPA3 secured network. This is dependent on your router configuration. WPA3 network provides a more secure connection than WPA2 network.

1. Navigate to **Settings > Wi-Fi**.

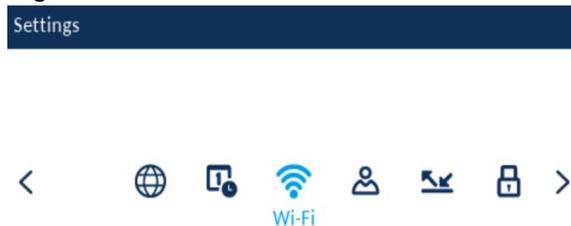


2. The **Available Networks** settings menu is displayed.




3. Select an SSID (that is, the name of a Wi-Fi network; for example, Home Network) from **Available Networks** press **Connect** softkey. If the SSID is secured, a password prompt appears.

**Note:** You can connect to only one SSID at a time. The SSID can be any alphanumeric, case-sensitive entry from 2 to 32 characters. The characters allowed for the SSID depend on the router configuration.

4. Enter the password for the network and select the **Save** softkey.

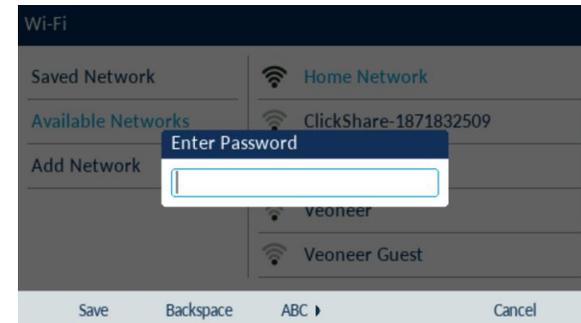


**Note:** If you enter an incorrect password, the **Connection failed** dialog box appears.

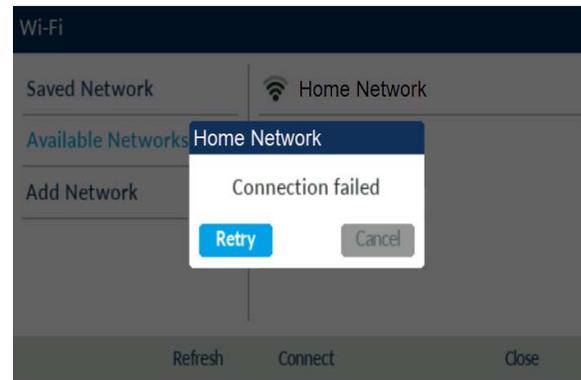

5. The **Save Settings** dialog box appears. Click **Yes** to reboot the phone and apply the

# Mitel 6930/6930w SIP Phone - Quick Reference Guide

changes.

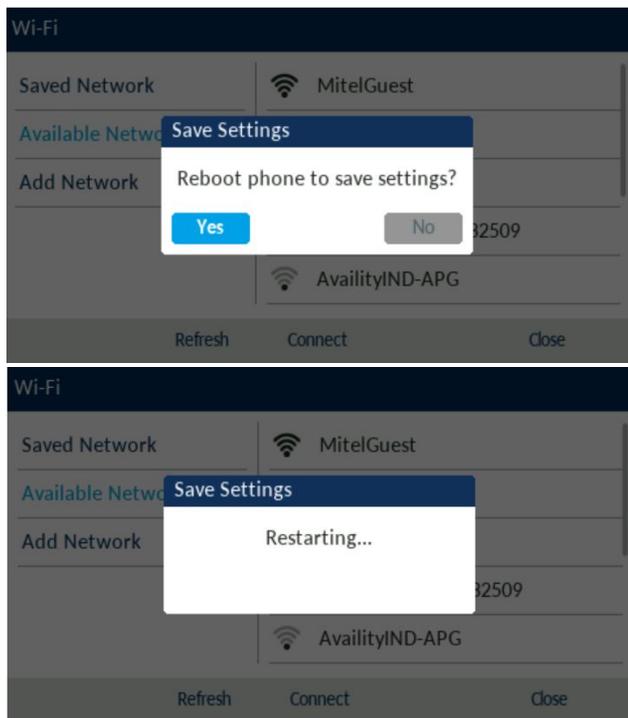


**Note:** After the phone restarts the LAN and PC ports are disabled (as it relates to network communications).

6. After the phone reboots, it is successfully connected to the network. The connected SSID (Home Network) is listed under **Saved Network**.
7. To disable Wi-Fi and use the LAN port again, navigate to **Settings > Wi-Fi** and press the **Disconnect** softkey. The **Save Settings** dialog box appears.
8. Click **Yes** to reboot the phone and apply the changes.

## Connecting to Hidden Network

A hidden network is an available wireless network which does not broadcast its SSID to all searching devices. Mitel IP phones can connect to a hidden network by manually entering Wi-Fi credentials.

1. Navigate to **Settings > Wi-Fi**.

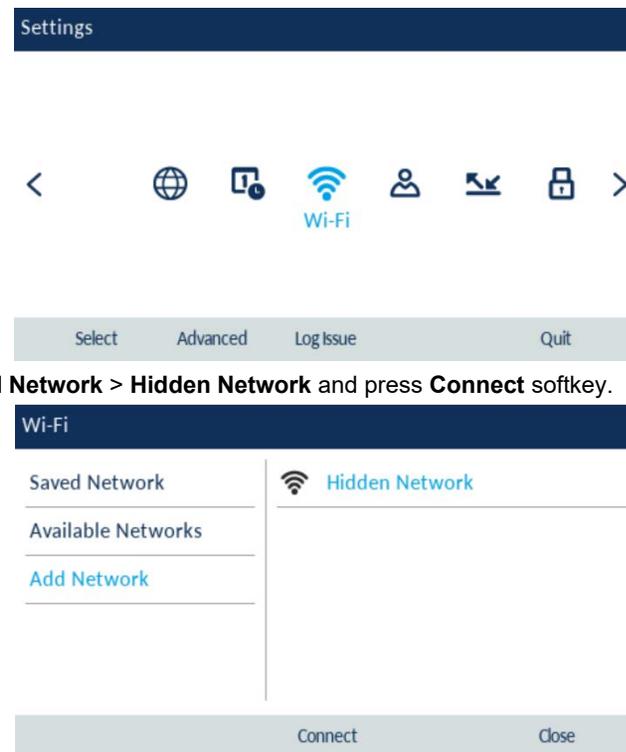


2. Select **Add Network > Hidden Network** and press **Connect** softkey.


3. In the **Hidden Network** screen, select the type of **Security** of the Network you are trying to connect. The available options are:
  - a. **WPA2-Personal**- To connect to a WPA2-Personal network enter the **Network Name** (SSID) and **Password**.
  - b. **WPA2-Enterprise**- To connect to a WPA2-Enterprise network enter the **Network Name** (SSID), **Username** and **Password**.
  - c. **WPA3-Personal**- To connect to a WPA3-Personal network enter the **Network Name** (SSID) and **Password**.
  - d. **Open**- To connect to a Open network enter the **Network Name** (SSID).

**Note:** You can connect to only one SSID at a time. The SSID can be any alphanumeric, case-sensitive entry from 2 to 32 characters. The characters allowed for the SSID depend on the router configuration.

# Mitel 6930/6930w SIP Phone - Quick Reference Guide

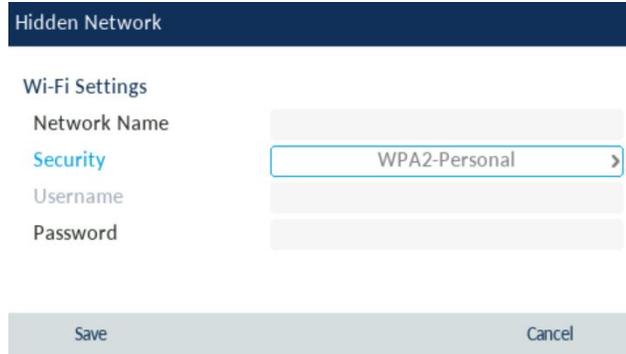



**Note:** If you enter an incorrect Network Name or Username or password, **Invalid Setting** dialog box appears.

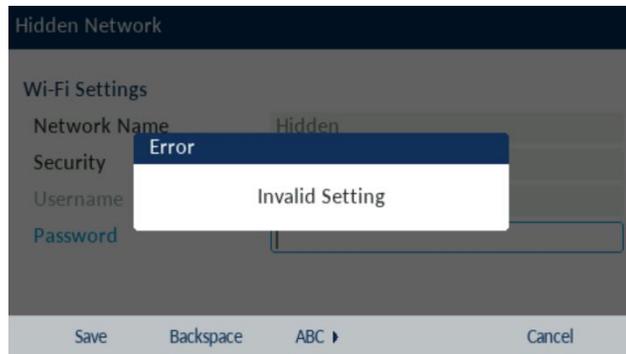

4. Press **Save** softkey.

5. The **Save Settings** dialog box appears. Click **Yes** to reboot the phone and apply the

changes.

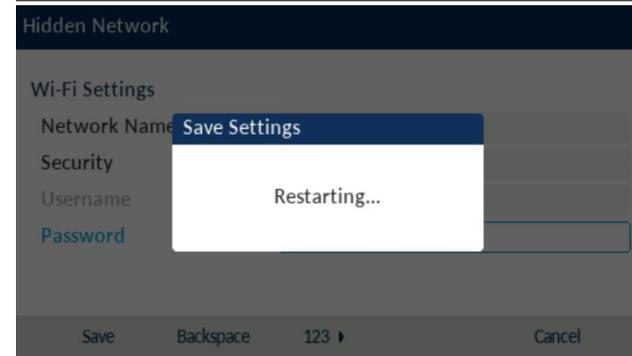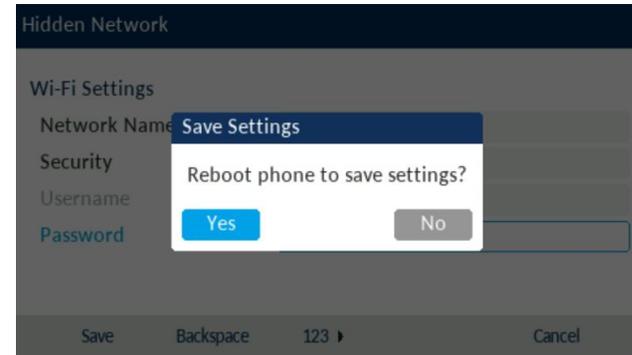


6. After the phone reboots, it is successfully connected to the network. The connected SSID (Hidden Network) is listed under **Saved Network**.
7. To disable Wi-Fi and use the LAN port again, navigate to **Settings > Wi-Fi** and press the **Disconnect** softkey. The **Save Settings** dialog box appears.
8. Click **Yes** to reboot the phone and apply the changes.

## Wi-Fi Network Connected/Wi-Fi Network Disconnected

If your phone successfully connects to the Wi-Fi network, name of connected network is

# Mitel 6930/6930w SIP Phone - Quick Reference Guide

listed under **Saved Network**.

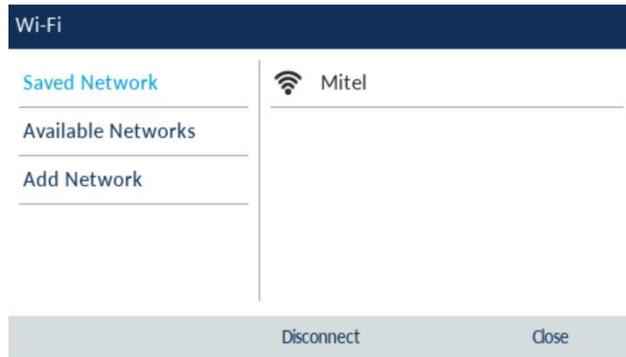

If your phone is disconnected from the Wi-Fi network Wi-Fi disconnected symbol is shown in the Status bar of the Home screen.