



PS-50-32 / PS-50-24



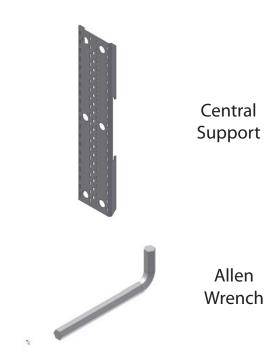

PS-ABV

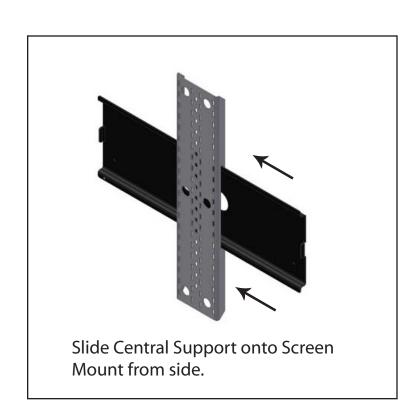



Countersunk Bolt



Buttonhead Bolt 1/4 x 3/4"




L-Support Bracket



Acorn Nut


Step 1

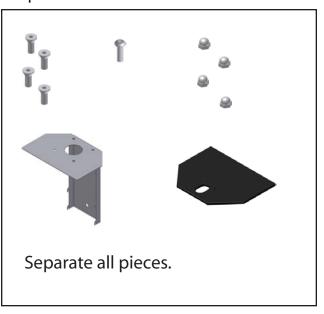




PS-ABV (continued)


Step 2

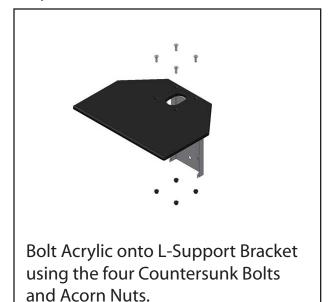

Step 4

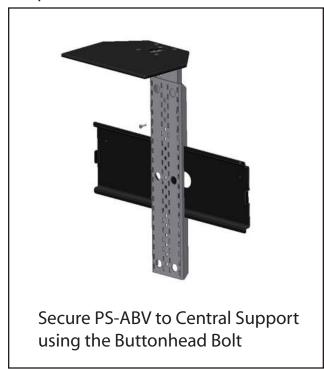


Step 3

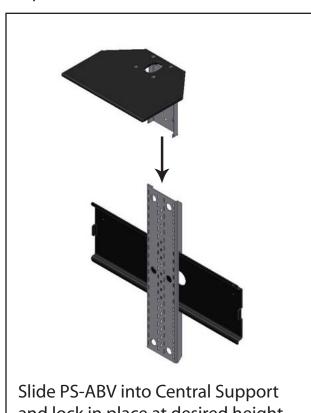

Slide PS-ABV into Central Support and lock in place at desired height using tabs.




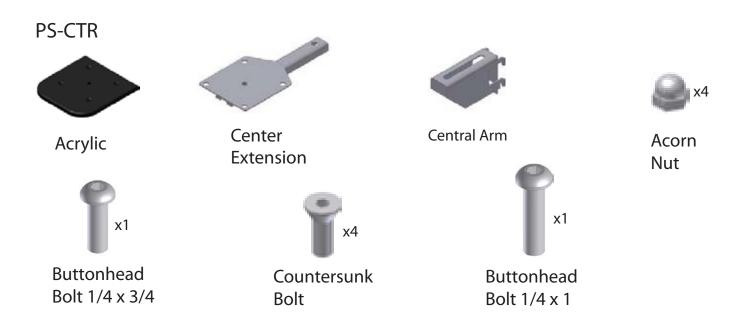

Step 1




Step 2

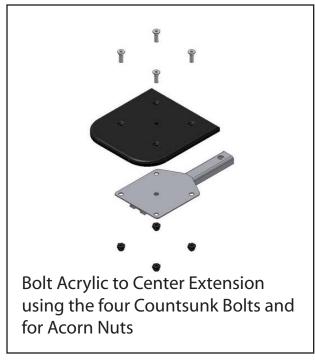




PS-CTR (continued)

Step 3

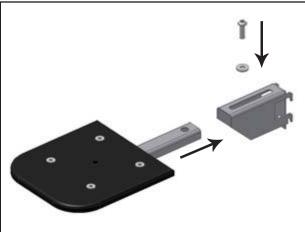


Using the Buttonhead Bolt 1/4 x 3/4", bolt the Center Extension with Acrylic to the Center Arm.

Step 5

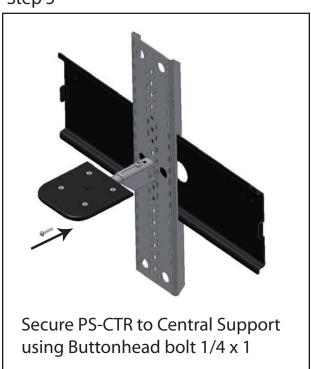

Step 4

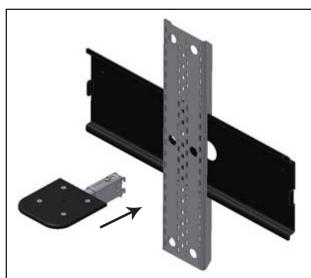


Lock in PS-CTR to Central Support using tabs. Adjust the length of the PS-CTR and tighten Buttonhead Bolt.




PS-BLW Bottom L-Support Bracket Buttonhead Bolt 1/4 x 3/4


Step 1

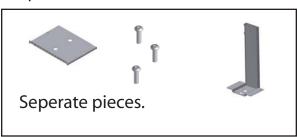

Step 2a

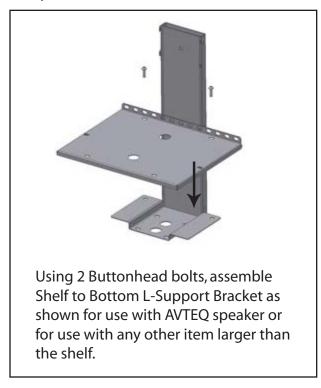


Step 2b - Optional Assembly

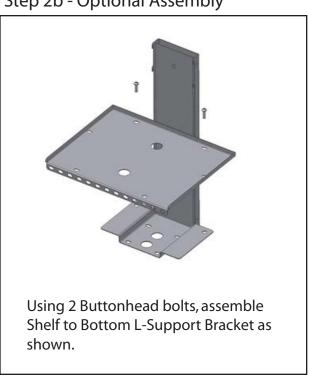



PS-BLW (continued)

Step 3

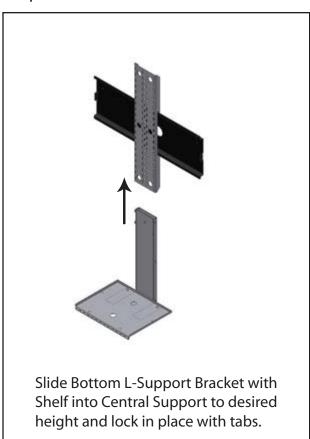

Step 5

