


Wall Mount Bracket

Quick Installation Guide



1. Package Content

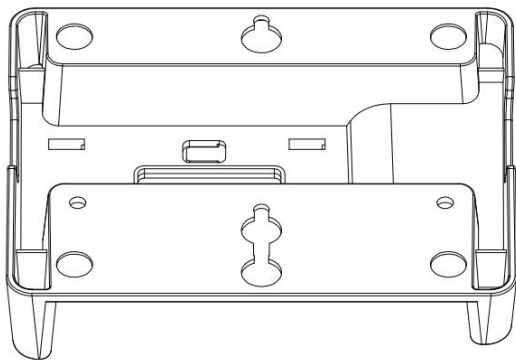

Wall Mount Bracket



Quick Installation Guide




Screw

2. Physical Specification

Model	Size	Applicable model
WB110	156.93 x 124.82 x 38.9(mm)	X305


3. Installation Diagram

- 1) Place the bracket in the position to be installed and mark the position of the screw hole;
- 2) After removing the bracket, use an electric drill to drill the 2 holes at the marked.
- 3) Push or hammer screw anchors into the drilled holes, then insert 2 screws, as shown below:

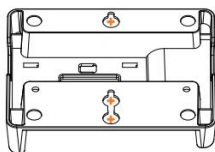


✦ Screw position


✦ x 2 ✦ x 2

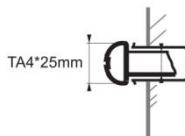


- 4) Insert the tabs on the wall mount bracket into the slots on the back of IP phone. And then slide the wall mount bracket to right, as shown below:

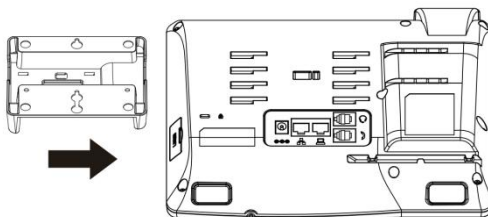

- 5) Pull the hookswitch tab in the handset cradle and rotate the hookswitch tab 180 degrees, then reinsert the hookswitch tab, as shown below:

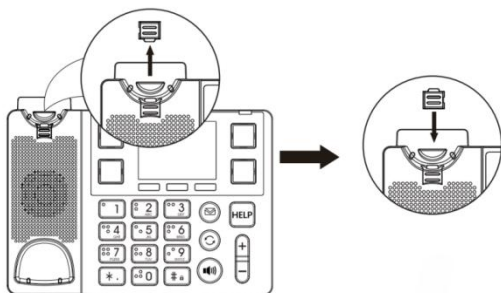

- 6) Finally, mount the IP phone to the wall, as shown below:

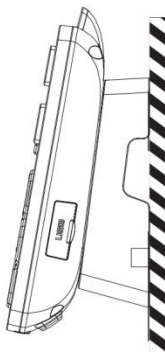

Fanvil