

C400/C600

WWW.FANVIL.COM

Smart IP Phone C400/C600 Quick Installation Guide



Fanvil

Smart VoIP

1

Fanvil

Instruction



C400/C600

Overview

Included Accessories



Smart IP Phone
C400/C600



Handset



Power adaptor



Handset cord



Quick Installation Guide




Ethernet Cable



Base bracket


2 The Appearance of Product

Front view and keypad instruction:

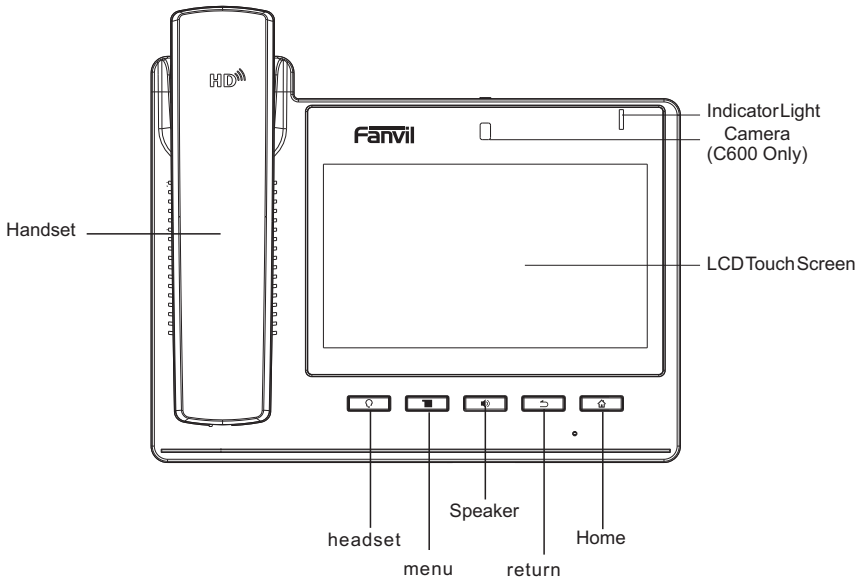

3 Connecting IP Phone


Connect the IP Phone as shown by the following diagram:

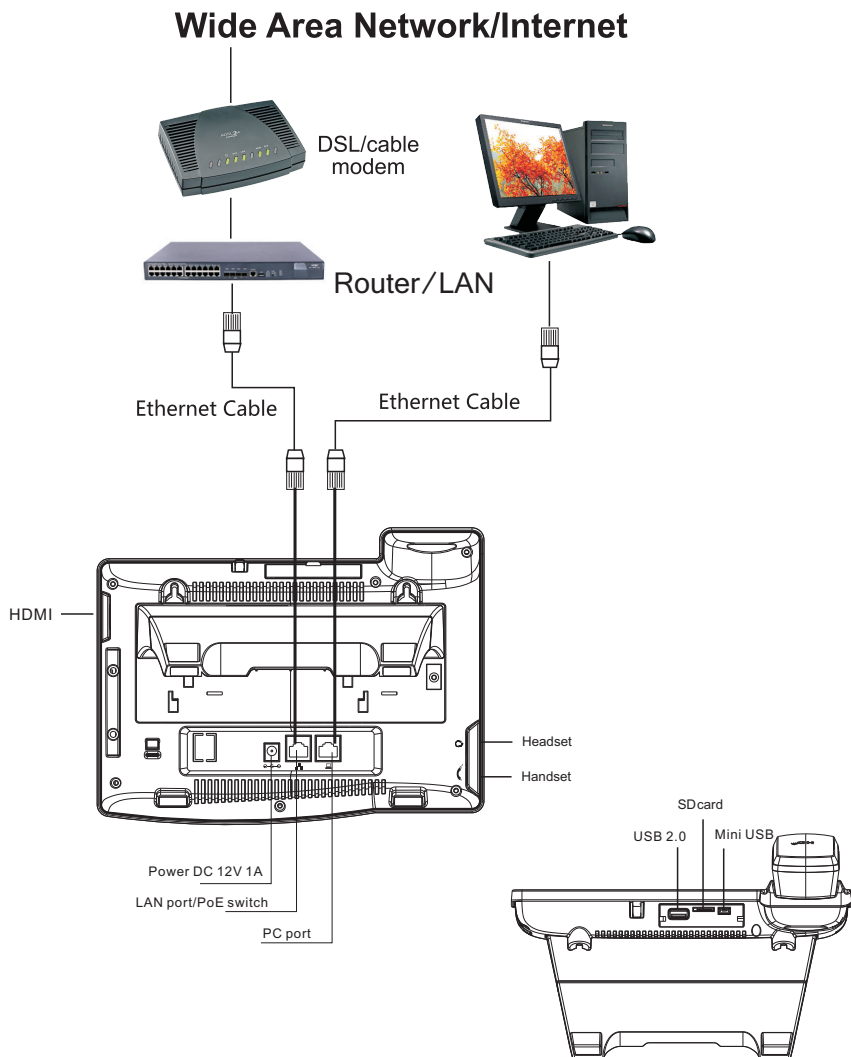

4 Configuration

Configuring via Web

1. Drag Status Bar on the top of Phone, and you would get the phone's network IP address.
 2. Open web browser and input the IP with, such as `http://192.168.1.1/` in the address bar. You would get ready to enter web interface and set up.
- * The default Username / Password is “admin” / “admin”.

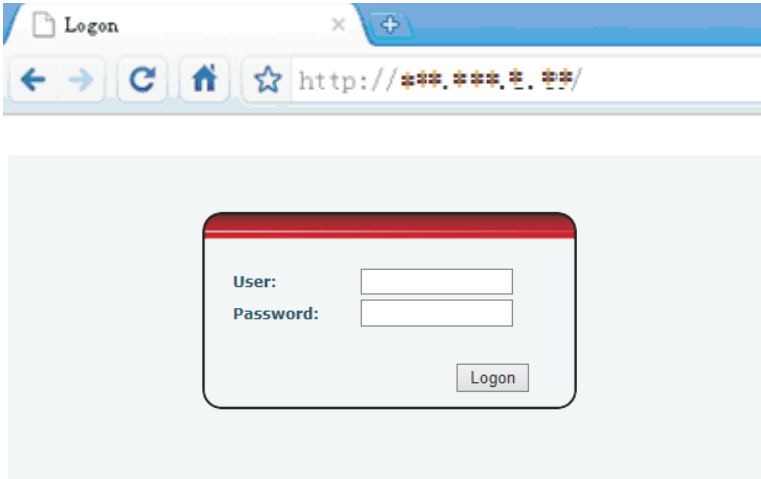

5 Configuration

VoIP Settings

1. Selects SIP Line for registration
2. Input IP address, Server Port, Authentication User, Password, SIP User, and Display name... Enable “Mark”, and Click “APPLY”

The screenshot shows the Fanvil C600 web interface. On the left is a red sidebar with navigation options: BASIC, NETWORK, VOIP (selected), PHONE, FUNCTION KEY, MAINTENANCE, SECURITY, and LOGOUT. The main content area has tabs for SIP and STUN. Under the SIP tab, there is a dropdown menu for 'SIP Line' set to 'SIP 1'. Below this is a 'Basic Settings >>' section with a table of fields:

Status	Registered	Domain Realm	<input type="text"/>
Server Address	<input type="text" value="172.18.1.2"/>	Proxy Server Address	<input type="text"/>
Server Port	<input type="text" value="5060"/>	Proxy Server Port	<input type="text"/>
Authentication User	<input type="text" value="8810"/>	Proxy User	<input type="text"/>
Authentication Password	<input type="password" value="*****"/>	Proxy Password	<input type="password"/>
SIP User	<input type="text" value="8810"/>	Backup Proxy Server Address	<input type="text"/>
Display Name	<input type="text" value="Adam"/>	Backup Proxy Server Port	<input type="text" value="5060"/>
Enable Registration	<input checked="" type="checkbox"/>	Server Name	<input type="text"/>

Below the table are sections for 'Audio Codecs >>' and 'Advanced SIP Settings >>'. An 'Apply' button is located at the bottom right of the settings area.

Configuring via LCD menu

Network Settings

1. Press “Phone Menu ICON” on the screen.
2. Select and Press “Network”.
3. Select DHCP, Static IP, or PPPoE – and “SAVE”

* The default value is DHCP. If you select Static IP or PPPoE, please input the necessary information follow by the screen.


VoIP Settings

1. Press “Phone Menu ICON” on the screen.
2. Select and Press “Accounts”
3. Please input MENU Password “123456” and Enter
4. Input Server address, Server port, Authentication User, Password and SIP User... Enable Registration “Mark”, and Click “SAVE”

6 Make a Phone Call

Make a call

1. Lift Handset, Dialing ICON, or SPEAKER Key
2. Select the SIP line you would like to use it
3. Dial the number – Press “#” sign or Video ICON key(C600 Only) to make a Audio or Video Call

* If you have the wrong number need to delete it, please press  to process it. Also, you can erase all of them by long pressing the delete ICON.

Answer a call

1. Audio Call (Default Configuration) -- Lift Handset or Press the SPEAKER key
2. Video Call (C600 Only)– Pressing the Video ICON to answer it. Or you can Lift Handset or Press the SPEAKER key if the phone had pre-programmed Video as Default.

* You could see the contact’s picture (pre-installed), name, and phone number when you receive a call which is in your contact list.

* You can switch the Audio to Video conversation if the other party accept your request by pressing the Video Request ICON.

Call Transfer

1. During the conversation with Party A, press the “Transfer” key, make another call conversation with Party B and Pressing the “Transfer“ Key again.
2. During the conversation with Party A, press the “Transfer” key, dial party B number than pressing the “Transfer” key again.

Call Conference

During the conversation with Party A, press the “Conference” key, make another call conversation with Party B and pressing the “Conference” key again.

* During the three parties’ conversation status, you can press either the picture of Party A or Party B to switch the individual conversation of each party.

* During the three parties’ conversation status, you can skip the current conversation by pressing the “Exit”. The other two parties can continue conversation without interrupting.

